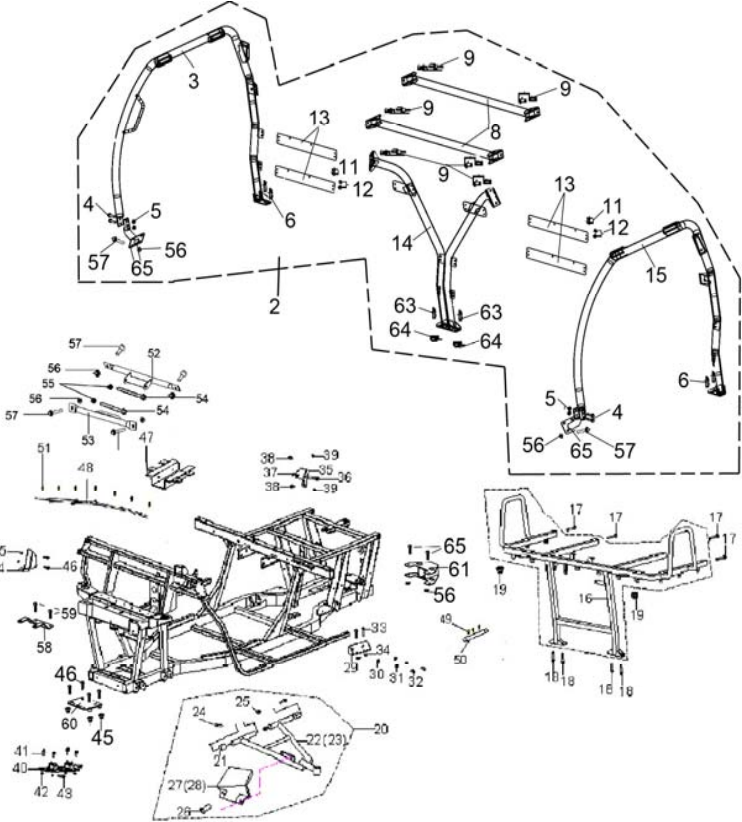 
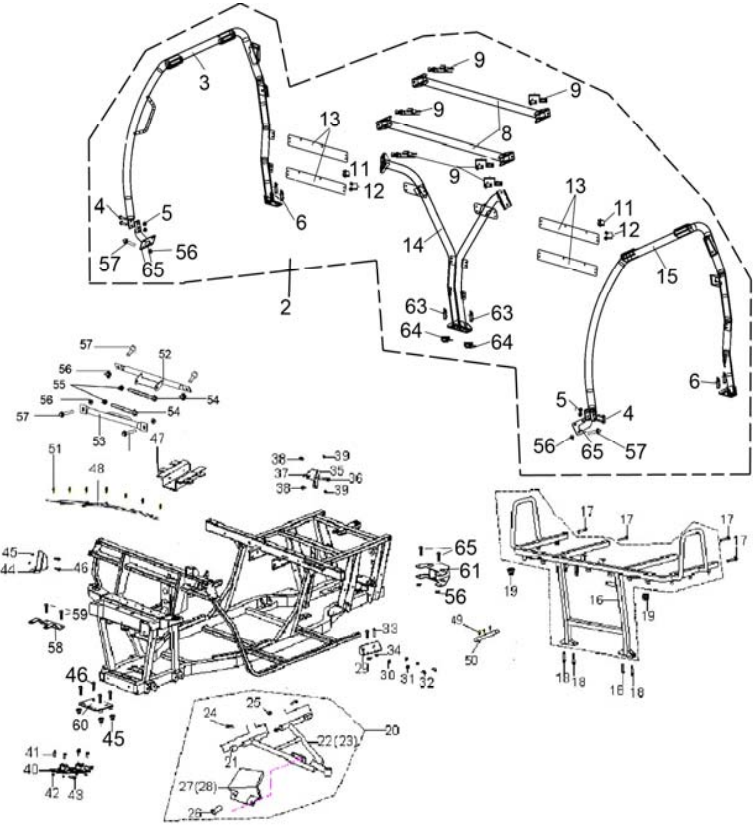 
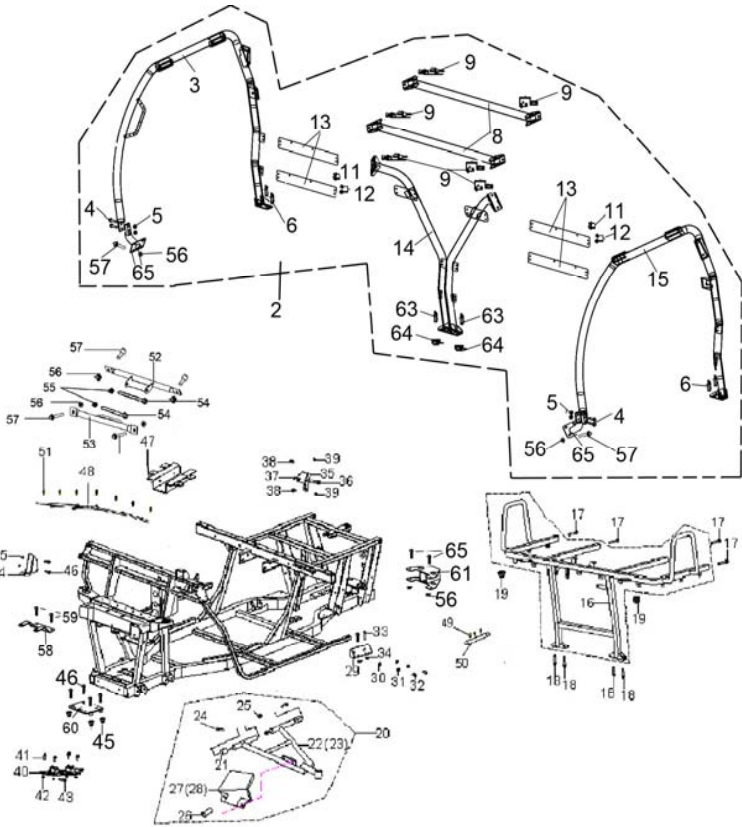 
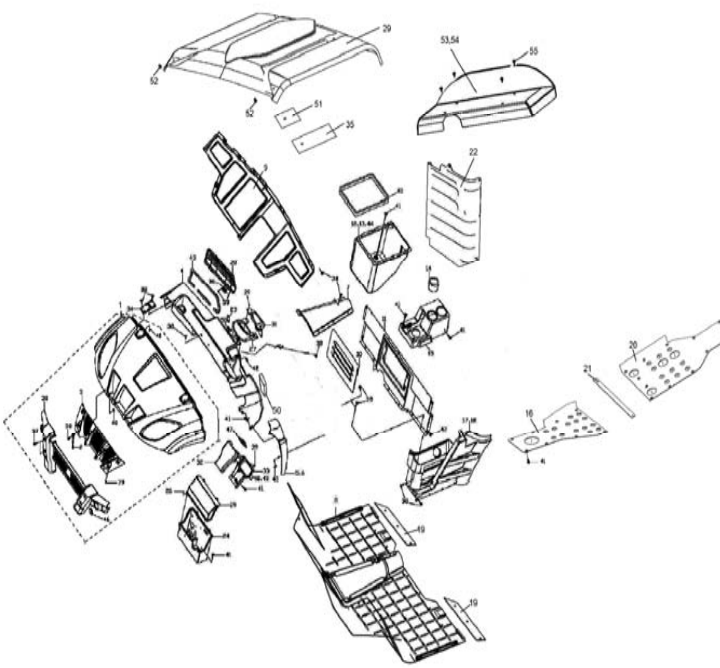 



CUV400 LX Model Parts Manual (7/31/2014)

1.FRAME	Ref#	Part#	Description	Qty	Linhai Code	Control Code
	1	27104d	FRAME	1	LH400CUV-2A.1.1	8TF01010000
	2	26701d	ROOF FRAME ASSY	1	LH400CUV-2A.1.2	8TF01020000
	3	26702d	MEMBER,ROOF FRAME 1	1	LH400CUV-2A.1.2.1	8TF01020100
	4	27209	BOLT M10X1.25X45	4	GB/T16674.2	B01041045A
	5	10015	NUT M10X1.25	4	GB/T6187.2	B015510A
	6	10283	BOLT M10X1.25X80	4	GB/T16674.2	B01041035A
	8	26704h	MEMBER,ROOF FRAME 2	2	LH400CUV-2A.1.2.4	8TF01020400
	9	10163	BOLT M10X1.25X20	12	GB/T16674.2	B01041020A
	11	41311	SCREW M6X16	16	GB/T16674.1	B01040616
	12	10004	NUT M6	16	GB/T6187.1	B015506
	13	26707d	BRACKET,BACK REST	4	LH400CUV-2A.1.2.-1	8TF01020001
	14	26704d	MEMBER,ROOF FRAME 3	1	LH400CUV-2A.1.2.3	8TF01020300
	15	26705d	MEMBER,ROOF FRAME 4	1	LH400CUV-2A.1.2.2	8TF01020200
	16	26708a	SEAT FRAME (USED FOR USA)	1	LH300CUV.1.3a	8M00103a0000
	17	26249	BOLT M10X1.25X60	4	GB/T16674.2	B01041060A
	18	10124	BOLT M8X35	4	GB/T16674.1	B01040835
	19	26721	RUBBER SET,SEAT	2	LH300CUV.1-1	8M001000001
	20	26709	A-ARM ASSY	1	LH300CUV.1.4	8M001040000
	21	20524f	BUSHING	4	LH260ATV.1.8a-1	8E00108a0001
	22	26710	A-ARM ,R	1	LH300CUV.1.4.1	8M001040100
	23	26711	A-ARM ,L	1	LH300CUV.1.4.2	8M001040200


1.FRAME	Ref#	Part#	Description	Qty	Linhai Code	Control Code
	24	27077	A-ARM PIVOT SHAFT	4	LH260ATV.1.8-1a	8E001080001a
	25	10136	NUT M12X1.25	4	GB/T6187.2	B015512A
	26	10001	SCREW M5X12	4	GB/T818	B02020512
	27	20519	A - ARM SHIELD,L	1	LH260ATV.2-21	8E002000021
	28	20628	A - ARM SHIELD,R	1	LH260ATV.2-22	8E002000022
	29	21508	TRANSMISSION MOUNTING BRACKET BOTTOM	1	LH260ATV.1-7	8E001000007
	30	10019	WASHER,PLANT	2	GB/T97.1	B025310
	31	10027	WASHER,SPRING	2	GB/T93	B025110
	32	10028	BOLT M10X25	2	GB/T5783	B01011025
	33	10081	BOLT M8X20	2	GB/T16674.1	B01040820
	34	10079	NUT M8	2	GB/T6187.1	B015508
	35	21514	TRANSMISSION MOUNTING BRACKET REAR	1	LH260ATV.1-8	8E001000008
	36	10084	BOLT M10X1.25X70	1	GB/T5785	B01071070A
	37	10015	NUT M10X1.25	1	GB/T6187.2	B015510A
	38	10081	BOLT M8X20	2	GB/T16674.1	B01040820
	39	10015	NUT M10X1.25	2	GB/T6187.1	B015510
	40	24438	BACKSTOP	1	LH260ATV.1.18	8E001180000
	41	10163	BOLT M10X1.25X20	4	GB/T16674.2	B01041020A
	42	10209	NUT M10X1.25	4	GB/T6184	B015510
	43	10208	BOLT M10X1.25X43	2	GB/T16674.2	B01041043A
	44	26728	BRACKET,TANK RECOVERY	1	LH300CUV.1-2	8M001000002
	45	10218	BOLT M8X40	6	GB/T16674.1	B01040840
	46	10079	NUT M8	6	GB/T6187.1	B015508
	47	27105	BRACKE, REAR AXLE	1	LH400CUV-2.10-3	8T010000003

1.FRAME	Ref#	Part#	Description	Qty	Linhai Code	Control Code
	48	27175	FRONT PANEL BRACKET	1	LH300CUV.1-12	8M001000012
	49	10008	BOLT M6X20	6	GB/T70	B02010620
	50	26712	PROTECT	2	LH300CUV.1.5	8M001050000
	51	10537	RIVET	7	GB/T12618	
	52	27185	UPPER BRACKET, RR, REAR GEAR-BOX	1	LH400CUV-2.1.3	8T001030000
	53	27186	UPPER BRACKET, FR, REAR GEAR-BOX	1	LH400CUV-2.1.4	8T002040000
	54	70008	BOLT M10X1.25X126	2	GB/T16674.1	B010410126A
	55	10015	NUT M10X1.25	2	GB/T6187	B015510A
	56	10079	NUT M8	14	GB/T6187	B015508
	57	10081	BOLT M8X20	12	GB/T16674.1	B01040820
	58	46001	UPPER BRACKET, FR, RADIATOR	1	LH400CUV-2A.1-1	8TF01000001
	59	10530	BOLT M6X55	2	GB/T 16674.1	B01040655
	60	46002	TRACTION MOUNTING PLATE	1	LH400CUV-2A.1.5	8TF01050000
	61	27045d	TRACTION SEAT INSTALLATION COMPONENTS	1	LH400CUV-2A.1.4	8TF01040000
	62	25150	BOLTM8X80	2	GB/T16674.1	B01040880
	63	10731	BOLT M10X1.25X80	2	GB/T16674.2	B01041080A
	64	10015	NUT M10X1.25	2	GB/T6187.2	B015510A
	65	70497d	TRANSITION JOINT ASSY.	2	LH400CUV-2A.1.2.5	8TF01020500

2.FENDER	Ref#	Part#	Description	Qty	Linhai Code	Control Code
	1	26201	FRONT BODY (FOR A TYPE)	1	LH300CUV.2-1	8M002000001
	2	26212	RUBBER,FRONT BODY FITTING	2	LH300CUV.2-2	8M002000002
	3	26223	GRILLE,FRONT	1	LH300CUV.2-3	8M002000003
	4	26228	PANEL,FRONT	1	LH300CUV.2-4	8M002000004
	5	27157	MUDGUARD,L,FR	1	LH300CUV.2-55	8M002000055
	6	27158	MUDGUARD,R,FR	1	LH300CUV.2-56	8M002000056
	7	27159	COVER,AXLE	1	LH300CUV.2-54	8M002000054
	8	27160d	MUDGUARD,LOWER.CENTER	1	LH400CUV-2A.2-2	8TF02000002
	9	27161	MUDGUARD,UPPER.CENTER	1	LH300CUV.2-52	8M002000052
	10	27162	REPAIR COVER	1	LH300CUV.2-58	8M002000058
	11	27163d	PROTECT COVER	1	LH400CUV-2A.2-8	8TF02000008
	12	26204	TOOL BOX(CONTAIN TWO OBJECTS WITH JOINTING)	1	LH300CUV.2-12	8M002000012
		26205		1	LH300CUV.2-13	8M002000013
	14	26206	CAP SEAT	2	LH300CUV.2-14	8M002000014
	15	26207	COVER	1	LH300CUV.2-15	8M002000015
	16	27073d	PLASTIC PLANT, FRONT	1	LH400CUV-2A.2-3	8TF02000003
	17	26209d	SIDE PANEL COVER,L	1	LH400CUV-2A.2-6	8TF02000006
	18	26210d	SIDE PANEL COVER,R	1	LH400CUV-2A.2-7	8TF02000007
	19	27161d	MUDGUARD,LOWER.CENTER SMALL	1	LH400CUV-2A.2-1	8TF02000001
	20	27073e	PLASTIC PLANT, REAR	1	LH400CUV-2A.2-4	8TF02000004
	21	27073f	PLASTIC PLANT, SMALL	1	LH400CUV-2A.2-5	8TF02000005
	22	27157d	MUDGUARD, AIR CLEANER	1	LH400CUV-2A.2-9	8TF02000009
	23	26216	SWITCH COVER	2	LH300CUV.2-23	8M002000023

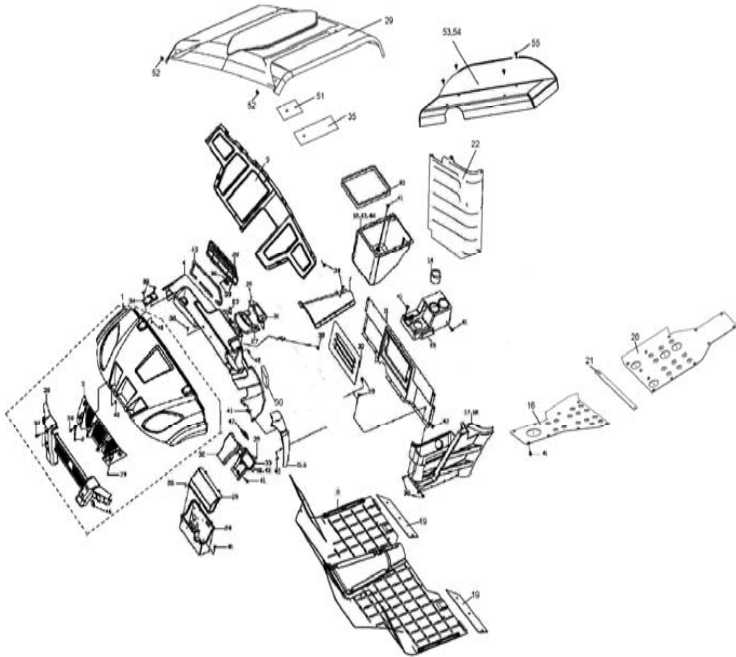 
2.FENDER	Ref#	Part#	Description	Qty	Linhai Code	Control Code
	24	26217d	ELECTRIC BOX	1	LH400CUV-2A.2-11	8TF02000011
	25	26218	ELECTRIC BOX COVER	1	LH300CUV.2-25	8M002000025
	26	26219	PIN,ELECTRIC BOX COVER	4	LH300CUV.2-26	8M002000026
	27	26220	SPEED METER COVR	1	LH300CUV.2-27	8M002000027
	28	26221	LID,GLOVE COVER	1	LH300CUV.2-28	8M002000028
	29	27043d	TOP COVER	1	LH400CUV-2A.2-10	8TF02000010
	30	26224	FRONT COVER	1	LH300CUV.2-30	8M002000030
	31	26225	SPEED METER REAR COVR	1	LH300CUV.2-31	8M002000031
	32	26226	STEERING WHEEL COVER,FR	1	LH300CUV.2-32	8M002000032
	33	26227	STEERING WHEEL COVER,RR	1	LH300CUV.2-33	8M002000033
	34	26759	COVER BRACKET	2	LH300CUV.2.1	8M002010000
	35	27043f	WASHER 1, TOP COVER	4	LH400CUV-2A.2-11	8TF02000011
	36	10059	BOLT M8X25	2	GB/T16674.1	B01040825
	37	20315	BOLT M6X20	67	LH260ATV.2-23	8E002000023
	38	10009	BOLT ST4.8X16	23	GB/T845	B02914816
	39	10103	NUT M6	10	GB/T6177	B015206
	40	10187	BOLT M6X25	29	GB/T16674.1	B01040625
	41	22346	SPRING NUT	12	LYM100T.6-2	2AY06000002
	42	26816	TOOL BOX DUSTPROOF	1	LH300CUV.2-34	8M002000034
	43	26817	ADIABATIC PELLICLE, TOOL BOX	1	LH300CUV.2-35	8M002000035
	44	26818	GLOVE BOX DUSTPROOF	1	LH300CUV.2-36	8M002000036
	45	25092	FRONT INDICATION LIGHT COVER (ONLY FOE USA)	2	LH520ATV.2-63	8G002000063
	46	26819	STEERING COVWER	1	LH300CUV.2-37	8M002000037

 3. SHOCK ABSORBER FRONT

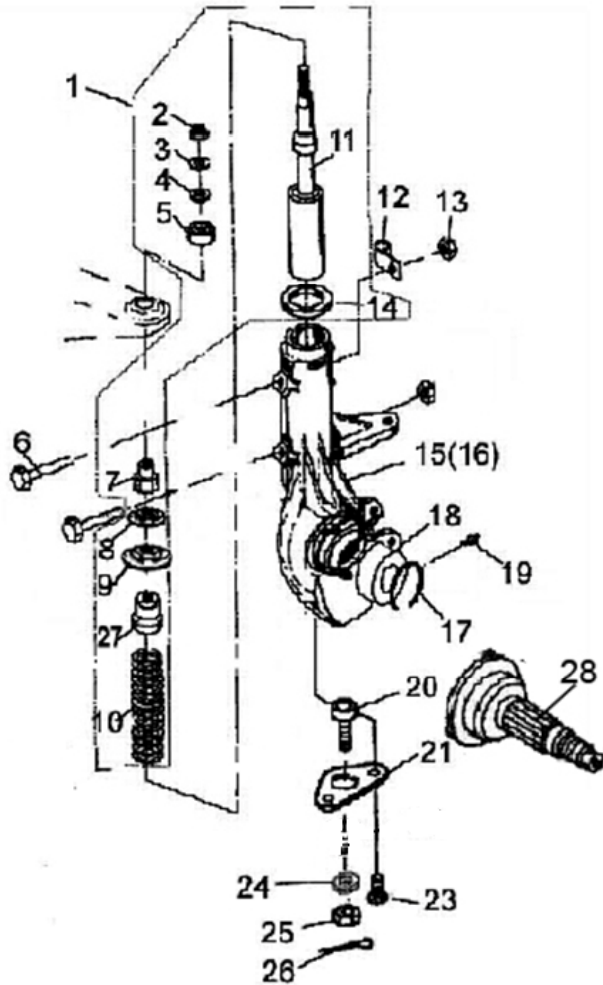


Ref#	Part#	Description	Qty	Linhai Code	Control Code
1	26907	FRONT SHOCK ABSORBER ASSEMBLY	2	LH300CUV.3.1	8M003010000
2	10091	NUT M14X1.5	2	GB/T6184-M14X1.5	B015314A
3	21802	WASHR 14	2	LH260ATV.3.1-1	8E003010001
4	21803	SPACER RUBBER	2	LH260ATV.3.1-2	8E003010002
5	21804	UPPER PIVOT BALL	2	LH260ATV.3.1-3	8E003010003
6	10093	BOLT M8X55	4	GB/T5782-M8X55	B01060855
7	21806	NUT M14X1.5	2	LH260ATV.3.1-6	8E003010006
8	21807	LOWER PIVOT BALL	2	LH260ATV.3.1-4	8E003010004
9	21808	SPRING RETAINER	2	LH260ATV.3.1-5	8E003010005
10	26909	SPRING	2	LH300CUV.3.1-1	8M003010001
11	26908	STRUT BUMPER	2	LH300CUV.3.1.1	8M003010100
12	32104	CLAMP	2	LH260ATV.5.1a-1	8E00501a0001
13	10079	NUT M8	4	GB/T6187-M8	B015508
14	21813	SPRING RETAINER	2	LH260ATV.3.1-9	8E003010009
15	26910	STRUT BODY LEFT	1	LH300CUV.3.2-1	8M003020001
16	26911	STRUT BODY RIGHT	1	LH300CUV.3.2-2	8M003020002
17	26912	CIRCLIP	2	LH300CUV.3.2-3	8M003020003
18	26913	BEARING	2	LH300CUV.3.3	8M003030000
19	27074	GREASE FITTING	2	JB/T7940.1-M6	B23106
20	20512	BALL JOINT STUD	2	LH260ATV.3.2.4	8E003020400
21	20513	BALL JOINT MOUNTING BRACKET	2	LH260ATV.3.2-1	8E003020001
22	20514	BALL JIONT CUP	2	LH260ATV.3.2-2	8E003020002
23	10022	BOLT M6X12	4	GB/T819.1-M6X12	B02030612

 3. SHOCK ABSORBER FRONT

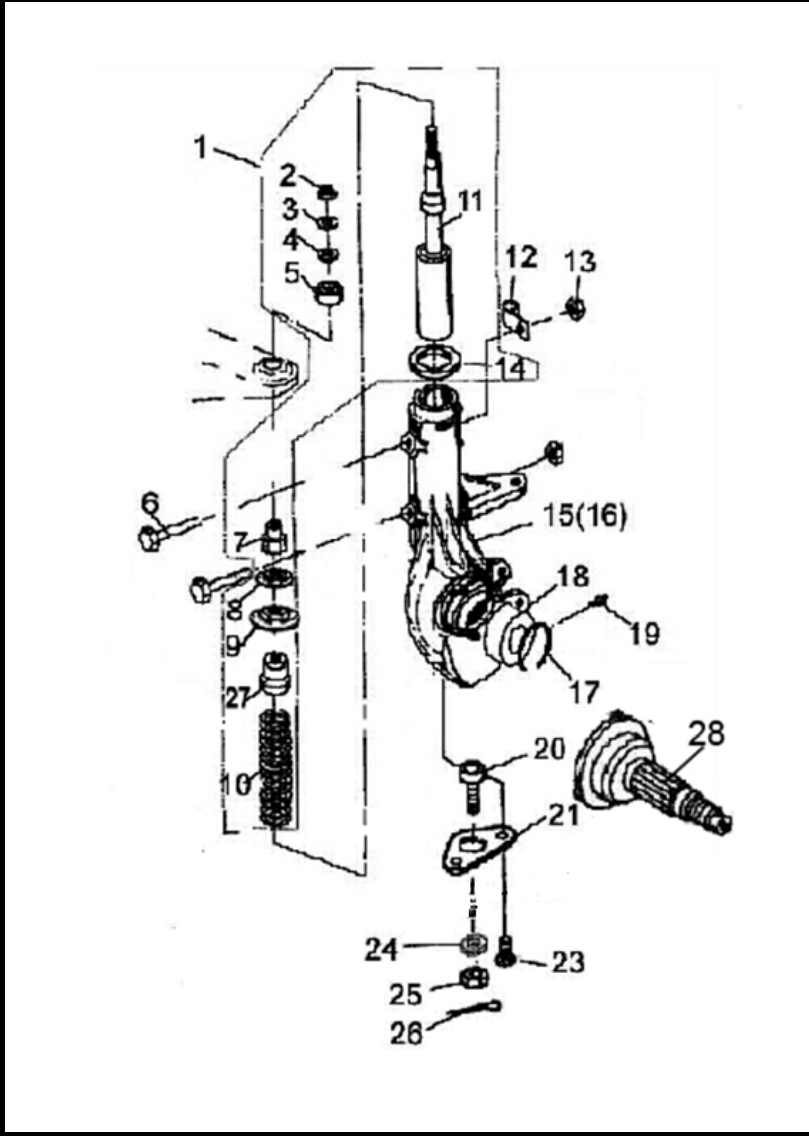[illegible]

 4. SHOCK ABSORBER REAR

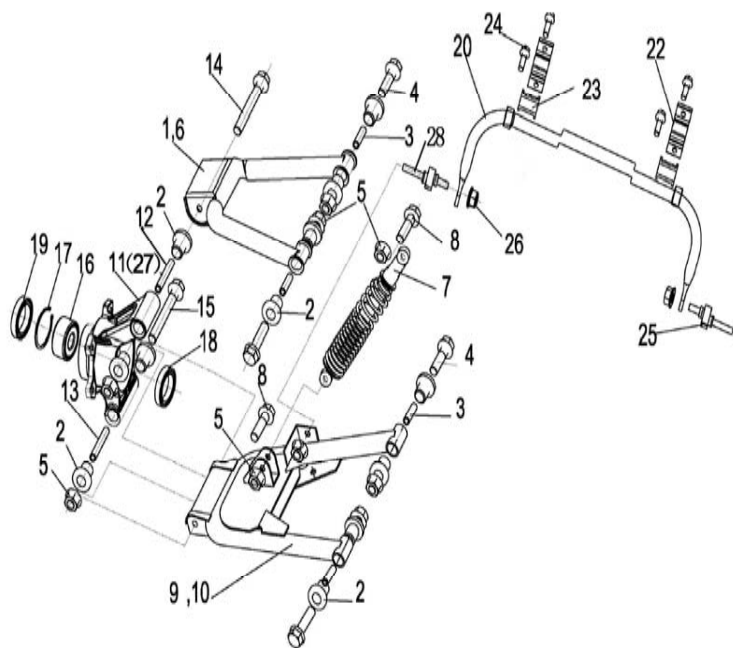


Ref#	Part#	Description	Qty	Linhai Code	Control Code
1	27127	ARM ,L.RR	1	LH400CUV-2.4.1.1	8T004010100
2	70682	BUSH 1, ARM ,R.RR	24	LH520ATV.4.1-1	8G004010001
3	70683	COLLAR	8	LH520ATV.4.1-2	8G004000001
4	70684	BOLT M10X1.25X80	8	LH520ATV.4.1-3	8G004000002
5	10015	NUT M10X1.25	16	GB/T6187	B015510A
6	27128	ARM ,R.RR	1	LH400CUV-2.4.2.1	8T004020100
7	27126	SHOCK ABSORBER ,RR	2	LH400CUV-2.4.1	8T004010000
8	70012	BOLT M10X1.25X52	4	GB/T16674.1	B01041050A
9	27129	ARM SET,L.RR	1	LH400CUV-2.4.3.1	8T004030100
10	27130	ARM SET,R.RR	1	LH400CUV-2.4.4.1	8T004040100
11	27131	KNUCKLE,L.RR	1	LH400CUV-2.4.6-1	8T004060001
12	70692	COLLAR,RR.KNUCKLE,(UPPER)	2	LH520ATV.4.6-3	8G004060003
13	70693	COLLAR,RR.KNUCKLE,(LOWER)	2	LH520ATV.4.6-4	8G004060004
14	70694	BOL,TKNUCKLE,(UPPER)	2	LH520ATV.4.6-5	8G004060005
15	70695	BOL,TKNUCKLE,(LOWER)	2	LH520ATV.4.6-6	8G004060006
16	70674	BEARING AU0712	2	LH520ATV.3.6.2	8G003060200
17	70055	CIRCLIP 58	2	GB893.1	B036158
18	70675	SEAL 61.5 43 11	2	LH520ATV.3.6.3	8G003060300
19	70676	SEAL 58 41.2 11	2	LH520ATV.3.6.4	8G003060400
20	27133	BAR ,STABILIZER	1	LH400CUV-2.4-1	8T004000001
22	27090	HOLDER,STABILIZER BUSH	2	LH400ATV-2.4.7-1	8V004070001
23	27091	BUSH,RR.STABILIZER	2	LH400ATV-2.4.7-2	8V004070002
24	10081	BOLT M8X20	4	GB/T16674.1	B01040820

4. SHOCK ABSORBER REAR



[illegible]

 5. STEERING ASSY

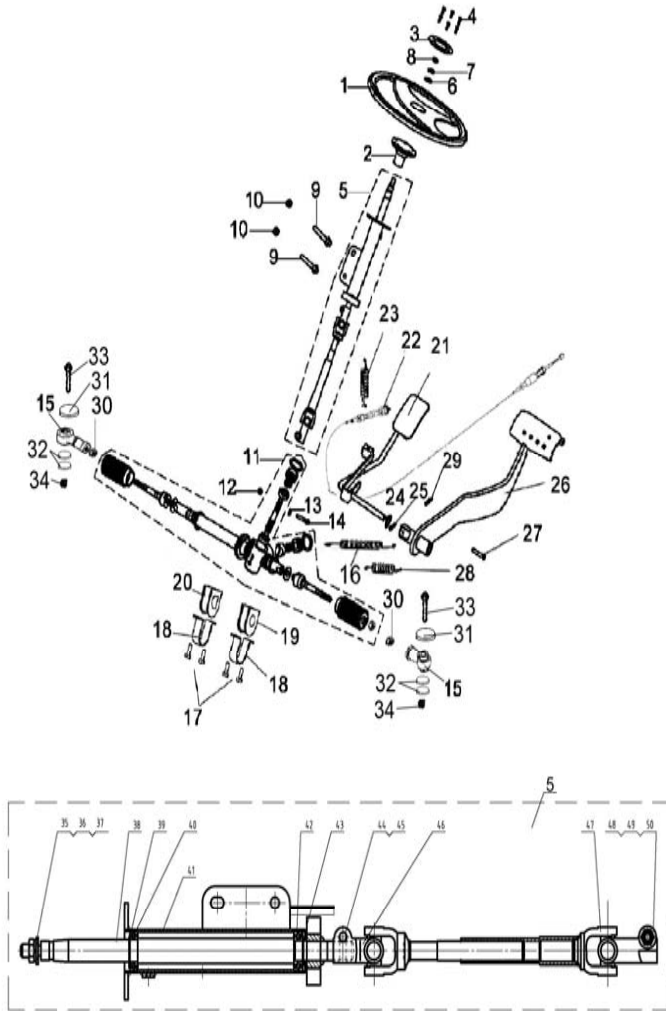


Ref#	Part#	Description	Qty	Linhai Code	Control Code
1	26925	WHEEL,STEERING	1	LH300CUV.5.1	8M005010000
2	26932	HOLDER,STEERING WHEEL	1	LH300CUV.5-1	8M005000001
3	26934	COVER,STEERING WHEEL	1	LH300CUV.5-2	8M005000002
4	10305	SCREW M5X	6	GB/T818	B02020510
5	26926	COLUMN,STEERING	1	LH300CUV.5.2	8M005020000
6	10032	WASHER 12	1	GB/T97.1-6	B025312
7	10054	WASHER SPRING 12	1	GB/T93	B025112
8	26257	NUT M12	1	GB/T6173	B016012
9	10282	BOLT M12X1.25X30	2	GB/T16674.1	B01041030A
10	10050	NUT M10X1.25	2	GB/T6173	B016010A
11	26927	STEERING ASSY	1	LH300CUV.5.3	8M005030000
12	10099	NUT M8	1	GB/T6170	B015808
13	10106	WASHER SPRING 8	1	GB/T93	B025108
14	26255	BOLT M8X40	1	GB/T5783	B01010840
15	26928	TIE ROD END B	2	LH300CUV.5.4	8M005040000
16	26933	SPRING B,BRAKE PADEL	1	LH300CUV.5-10	8M005000010
17	26241	BOLT M10X30	4	GB/T16674.1	B01041030
18	26935	COVER, STEERING	2	LH300CUV.5-3	8M005000003
19	26936	BUSH A	1	LH300CUV.5-4	8M005000004
20	26937	BUSH B	1	LH300CUV.5-5	8M005000005
21	26929	PADEL,THROTTLE	1	LH300CUV.5.5	8M005050000
22	27156	CABLE,THROTTLE	1	LH400CUV-2.5.4	8T005040000
23	26938	SPRING,THROTTLE	1	LH300CUV.5-6	8M005000006

  5. STEERING ASSY

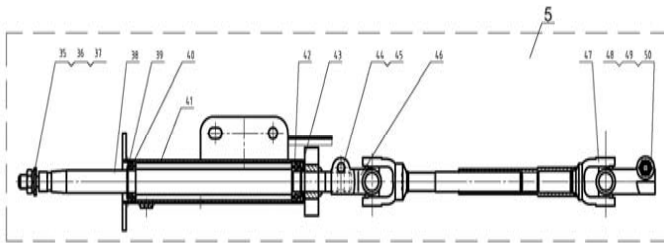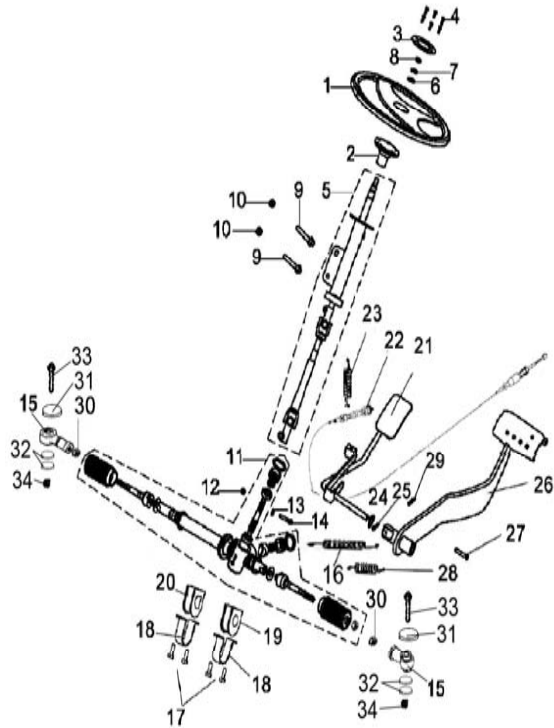


Ref#	Part#	Description	Qty	Linhai Code	Control Code
24	26939	WASHER	1	LH300CUV.5-7	8M005000007
25	10021	PIN	1	GB/T91	B031120A
26	26931	PEDAL,BRAKE	1	LH300CUV.5.7	8M005070000
27	26940	PIN	1	LH300CUV.5-8	8M005000008
28	26941	SPRING A,BRAKE PADEL	1	LH300CUV.5-9	8M005000009
29	26268	PIN	1	GB/T91	B0311425
30	10524	NUT M12X1.25	2	GB/T6176	B015112A
31	10706	BIG WASHER 10	2	GB/T5287	B025810
32	10089	WASHER 10	4	GB/T97.1	B025310
33	10708	BOLT M10X1.25X55	2	GB/T31.3	B01081055A
34	10707	NUT M10	2	GB/T6187.2	B015510
35	10700	NUT	1	LH300CUV.5.2-1	8M005020001
36	10054	WASHER SPRING	1	GB/T93	B025112
37	10032	WASHER	1	GB/T97.1	B025312
38	27197	SWITCH BLOCK	1	LH300CUV.5.2.8	8M005020800
		SMALL BRACKET	1	LH300CUV.5.2.9	8M005020900
		STEERING SHAFT	1	LH300CUV.5.2.1	8M005020100
		POSITIONING PLATE	1	LH300CUV.5.2.3	8M005020300
		WELDED HEXAGON NUTS M6	4	GB/T13681	B26206
		LOCK BRACKET	1	LH300CUV.5.2.11	8M005020011
		TAMPER RESISTANT SCREWS	4	LH300CUV.5-11	8M005000011
		LOCK THE LOCATING PLATE	1	LH300CUV.5.2.10	8M005021000
39	24407	A-SHAFT CIRCLIP 20	1	GB/T894.1	B036220

 
5. STEERING ASSY

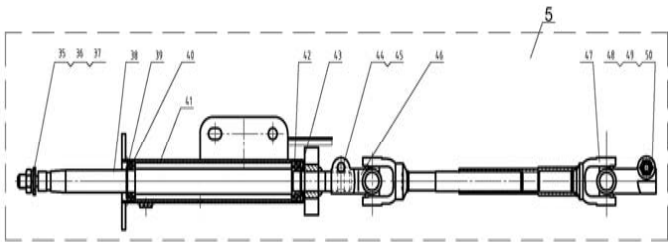[illegible]

 
6. FRONT WHEEL

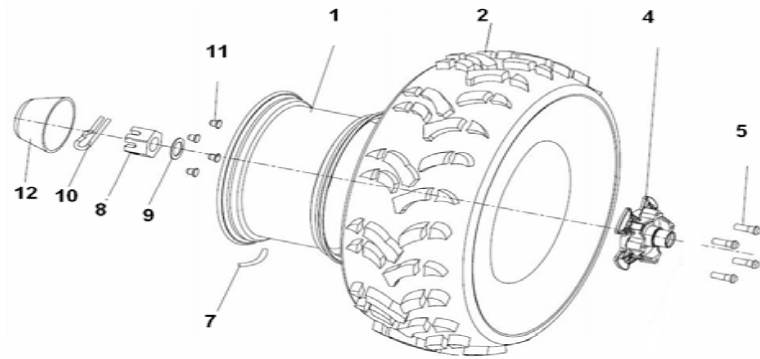

Ref#	Part#	Description	Qty	Linhai Code	Control Code
1	27330A	WHEEL SUB-ASSY, FR (FOUNDRY)	2	LH400ATV.6.2.1A	8N0060201A00
2	26943a	TIRE FRONT AT25X8-12 (FOR USA)	2	LH300CUV.6.1.2a	8M0060102a00
4	27285	HUB, FR WHEEL	2	LH300CUV.7-3a	8M007000003a
5	70714	BOLT M12X1.25	8	LH520ATV.6.2-2	8G006020002
7	20807A	VALVE, RIM (TR412)	4	GB/T12836.1	B24202Z
8	70721	BOLT SLOTTED	2	LH520ATV.7-1	8G007000001
9	70722	WASHER	2	LH520ATV.7-2	8G007000002
10	26267	PIN 4X32	2	GB/T91	B03110432
11	27411	LUG NUT M12X1.25 (FOR ALUMINUM WHEELS) (LONG)	8	LH800U-D.6-3	8X006000003
12	70717	CAP, WHEEL CENTER	2	LH520ATV.7.1-1	8G007010001

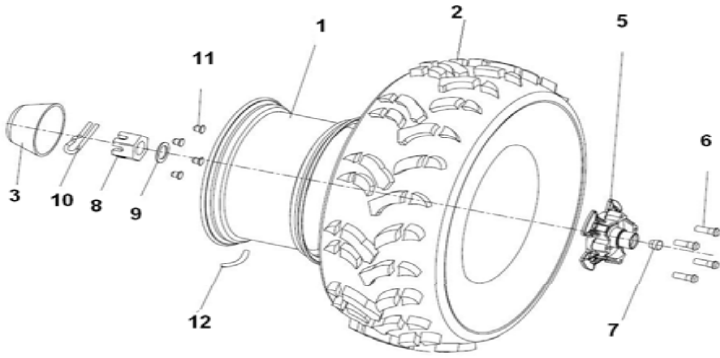 
7. REAR WHEEL		Ref#	Part#	Description	Qty	Linhai Code	Control Code
		1	27137	WHEEL SUB-ASSY, RR (FOUNDRY)	2	LH520ATV-B.7.1A	8L00701A0000
		2	27086a	TIRE, RR (25X10-12) (FOR USA)	2	LH300CUV.7.1.2a	8M007010200
		3	70717	CAP, WHEEL CENTER	2	LH520ATV.7.1-1	8G007010001
		5	70719	HUB, RR WHEEL	2	LH520ATV.7.2-1	8G007020001
		6	70714	BOLT M12X1.25	8	LH520ATV.6.2-2	8G006020002
		7	70718	SEAL	2	LH520ATV.7.2.1	8G007020100
		8	70721	BOLT SLOTTED	2	LH520ATV.7-1	8G007000001
		9	70722	WASHER	2	LH520ATV.7-2	8G007000002
		10	26267	PIN 4X32	2	GB/T91	B03110432
		11	27411	LUG NUT M12X1.25 (FOR ALUMINUM WHEELS) (LONG)	8	LH800U-D.6-3	8X006000003
		12	20807A	VALVE, RIM (TR412)	2	GB/T12836.1	B24202Z

 8. IRON FUEL TANK(EPA/CARB)

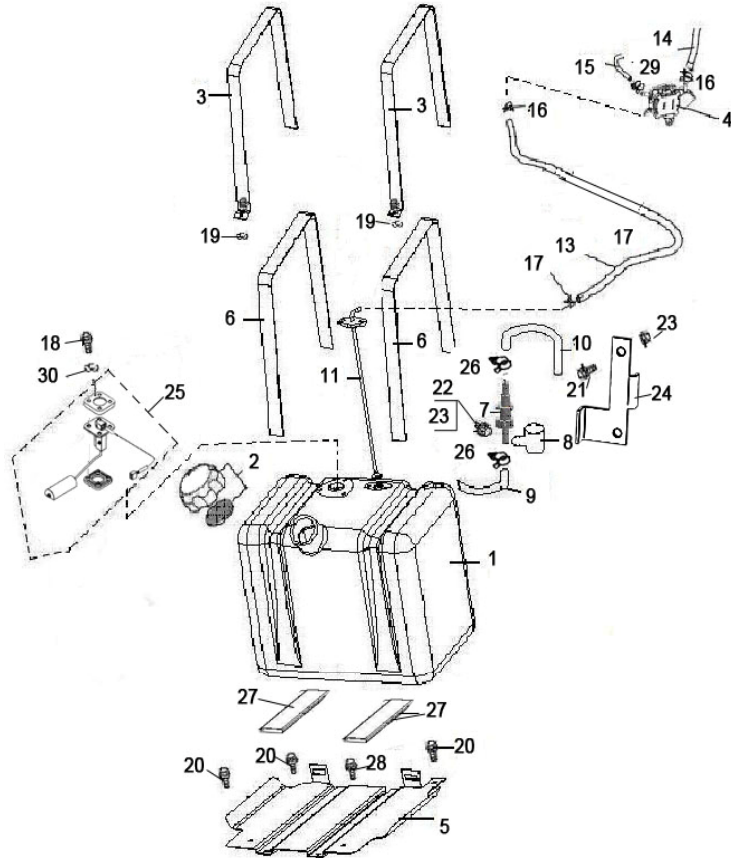


Ref#	Part#	Description	Qty	Linhai Code	Control Code
1	26953a	FUEL TANK(IRON)	1	LH300CUV.8.1a	8M00801a0000
2	20201a	FUEL CAP	1	LH520ATV.8.3a	8G0803a0000
3	26955a	STAY,FUEL TANK	2	LH300CUV.8.3a	8M00803a0000
4	40724	VACUUM PUMP	1	LH250T-B.5.5	2V005050000
5	26956a	DAMPER,PLATE 1	1	LH300CUV.8-2a	8M00802a0000
6	26957	DAMPER,PLATE 2	2	LH300CUV.8-3	8M008000003
7	25037	ROLL OVER VALVE ASSY	1	LH125T-12.11.5	2T011050000
8	880.021	CLAMP	1	LH125T-12.11-4	2T011000004
9	26958a	PIPE 1 ϕ 8X1.5 260	1	LH300CUV.8-4a	8M008000004a
10	26959a	PIPE 2 ϕ 7X2.5 450	1	LH300CUV.8-5a	8M008000005a
11	26954a	OUTLER	1	LH300CUV.8.2a	8M00802a0000
13	20223c	PIPE 3	1	LH260ATV.8.6a	8E00806a0000
14	26961a	PIPE 5 ϕ 11X3x570	1	LH300CUV.8-7a	8M008000007a
15	26962	PIPE 6 ϕ 10X2.5x400	1	LH300CUV.8-8	8M008000008
16	40706	CLAMP ϕ 11.3	3	LH250T-B.5-6	2V005000006
17	40707	CLAMP ϕ 12.3	1	LH250T-B.5-7	2V005000007
18	10730	BOLT M5X12	4	GB/T5783	B01010512
19	10099	NUT M8	2	GB/T6170	B015808
20	10055	BOLT M8X45	3	GB/T16674.1	B01040845
21	10186	BOLT M6X35	1	GB/T16674.1	B01040635
22	10183	BOLT M6X16	1	GB/T16674.1	B01040616
23	10090	NUT M6	2	GB/T6170	B015806
24	622010	BRACKET,ROLL OVER VALVE ASSY	1	LH300CUV.8-10a	8M008000010a

 8. IRON FUEL TANK(EPA/CARB)

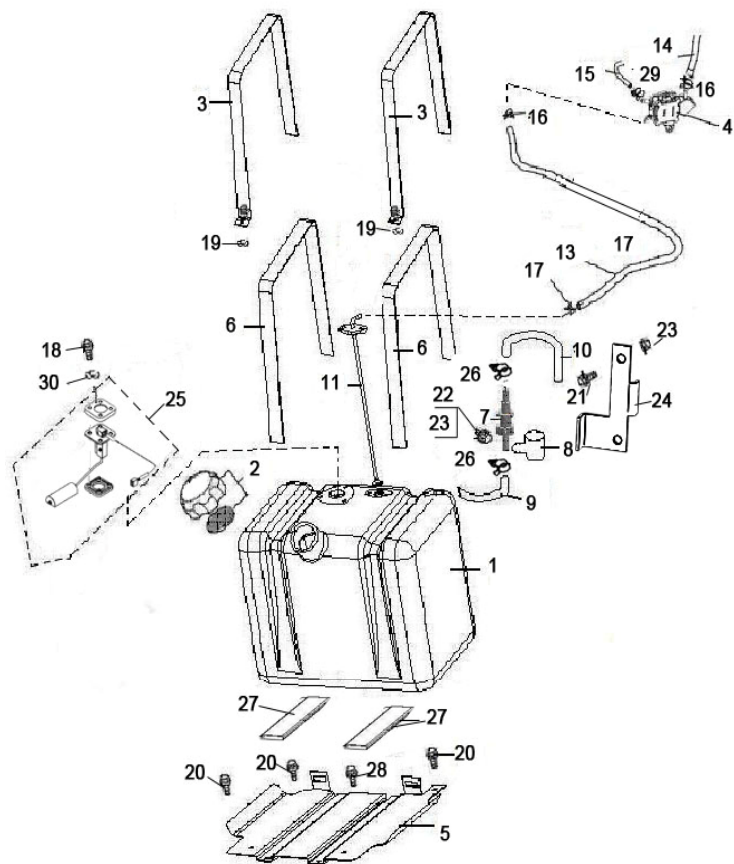
[illegible]

9. SEAT ASSY

Ref#	Part#	Description	Qty	Linhai Code	Control Code
1	26963a	SEAT ASSY (USED FOR USA)	2	LH300CUV.9.1a	8M00901a0000
2	26968	PIN,SEAT ASSY	2	LH300CUV.9-1	8M009000001
3	26969	SEAT LOCK	4	LH300CUV.9-2	8M009000002
4	10110	BOLT M6X20	20	GB/T16674.1	B01040620
5	26964a	BACK REST,L (USED FOR USA)	1	LH300CUV.9.2a	8M00902a0000
6	26965a	BACK REST,R (USED FOR USA)	1	LH300CUV.9.3a	8M00903a0000
7	26966a	HEAD REST,L (USED FOR USA)	1	LH300CUV.9.4a	8M00904a0000
8	26967a	HEAD REST,R (USED FOR USA)	1	LH300CUV.9.5a	8M00905a0000
9	26262	BOLT M6X12	16	GB/T818	B02020612

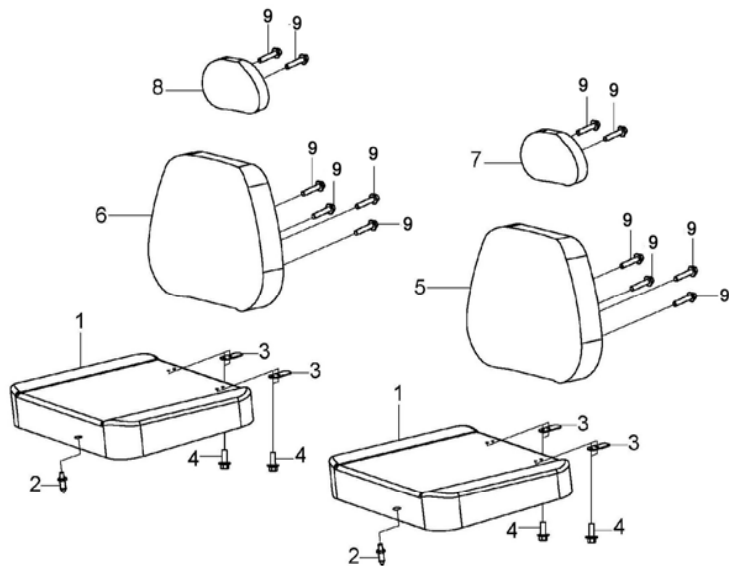 


 10. REAR DRIVE AXLE (OLD MODEL)

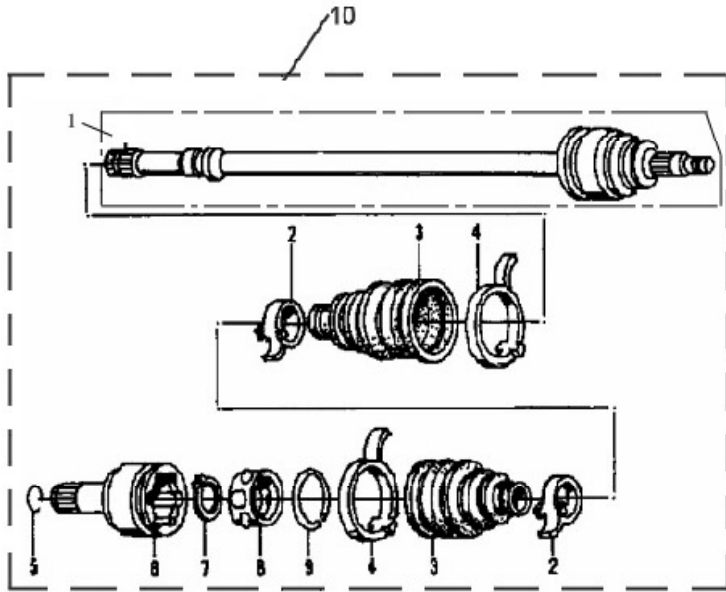

Ref#	Part#	Description	Qty	Linhai Code	Control Code
1	27136	DRIVE AXLE/OUTER CV JOINT ASSEMBLY	2	LH520ATV.20-1	8G020000001
			2	LH260ATV.6.5-2	8E006050002
			12	LH260ATV.6.5-3	8E006050003
	27113		2	LH400CUV-2.20-2	8T020000002
	24405		2	LH260ATV.6.5-16	8E0060500016
			2	LH260ATV.6.5-15	8E0060500015
2	24402	BOOT BAND "A"	1	LH260ATV.6.5-6	8E0060500006
3	24403	OUTER BOARD BOOT	1	LH260ATV.6.5-5	8E0060500005
4	24404	BOOT BAND "B"	1	LH260ATV.6.5-4	8E0060500004
5	70084	STOPPER RING B	1	LH260ATV.6.5-14	8E0060500014
6	70360	OUTER CV JOINT	1	LH520ATV.20-3	8G020000003
7	24407	CIRCLIP 20	1	GB/T894.1	B036220
8	25535	STEEL BALL BRACKET STEEL BALL AND GEAR WHEEL	2	LH260ATV.6.5-12	8E0060500012
	25534		2	LH260ATV.6.5-11	8E0060500011
	25533		6	LH260ATV.6.5-10	8E0060500010
9	24409	STOPPER RING A	1	LH260ATV.6.5-9	8E0060500009
10	27112	REAR DRIVE AXLE	1	LH400CUV-2.20	8T020000000

 
10A. REAR DRIVE AXLE (NEW MODEL)

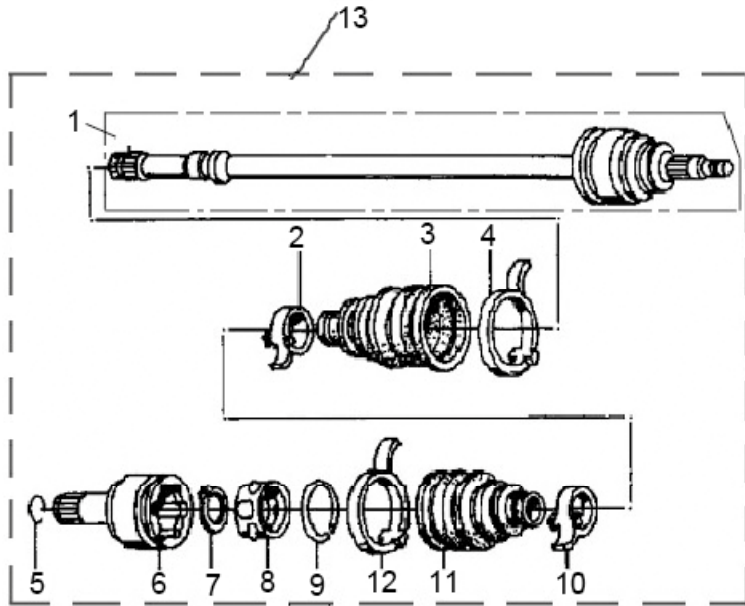

Ref#	Part#	Description	Qty	Linhai Code	Control Code
1	/	DRIVE AXLE/OUTER CV JOINT ASSEMBLY	2	4CD-25121-00	
	/		2	4CD-25125-00	
	/		12	4CD-25124-00	
	/		2	4CD-25129-00	
	/		2	4CD-25122-00	
	/		2	4CD-25126-00	
	/				
2	/	BOOT BAND "A"	2	4CD-25128-00	
3	/	OUTER BOARD BOOT "A"	2	4CD-25127-00	
4	/	BOOT BAND "A"	2	4CD-25123-00	
5	/	STOPPER RING C	2	4CD-2512J-00	
6	/	OUTER CV JOINT	2	4CD-2512I-00	
7	/	CIRCLIP	2	4CD-2512H-00	
8	/	STEEL BALL BRACKET STEEL BALL AND GEAR WHEEL	2	4CD-2512G-00	
	/		2	4CD-2512E-00	
	/		12	4CD-2512F-00	
9	/	STOPPER RING B	2	4CD-2512C-00	
10	/	BOOT BAND "B"	2	4CD-2512A-00	
11	/	OUTER BOARD BOOT "B"	2	4CD-2512B-00	
12	/	BOOT BAND "B"	2	4CD-2512D-00	
13	27112d	REAR DRIVE AXLE	2	4CD-25120-00	


11. SHIFT ROD	Ref#	Part#	Description	Qty	Linhai Code	Control Code
	1	26722	SHIFFER ASSY	1	LH300CUV.11.1	8M011010000
	2	10272	BOLT M6X16	4	GB/T5783	B01010616
	3	26723	BRACKET,SHIFTER	1	LH300CUV.11.2	8M011020000
	4	26724	KNOB	1	LH300CUV.11.3	8M011030000
	5	26258	BOLT M8X20	4	GB/T70	B02010820
	6	10068	WASHER 8	4	GB/T97	B025308
	7	10106	WASHER SPRING 8	4	GB/T93	B025108
	8	26725	SHIFTER MOUNTING ROD	2	LH300CUV.11.4	8M011040000
	9	10004	NUT M6	4	GB/T6187	B015506
	10	21625	SHIFT ROD END CCW	2	LH260ATV.18.2.2	8E018020200
	11	10090	NUT M6	4	GB/T6170	B015806
	12	26726	SHIFT ROD	2	LH300CUV.11-1	8M011000001
	13	21620	SHIFT ROD END CW	2	LH260ATV.18.2.1	8E018020100
	14	26727	BOOT, SEALING	1	LH300CUV.11-2	8M011000002

 12. REAR GEAR-BOX

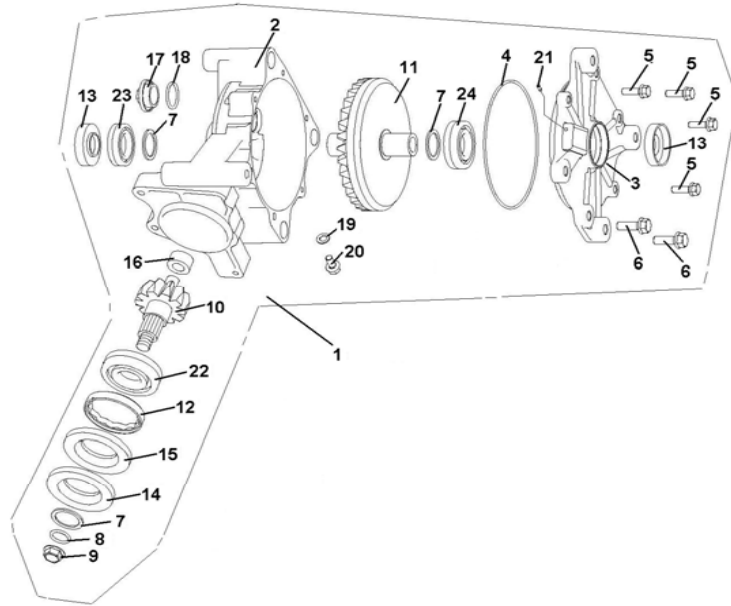


Ref#	Part#	Description	Qty	Linhai Code	Control Code
1	70286	REAR GEAR-BOX ASSY	1	LH520ATV.12	8G012000000
2	70291	DRIVE HOUSING	1	LH520ATV.12-1	8G012000001
3	70292	OUTPUT COVER	1	LH520ATV.12-2	8G012000002
4	70293	O-RING 160X2.65	1	LH520ATV.12-3	8G012000003
5	10060	BOLT M8X28	4	GB/T16674.1	B01040828
6	70010	BOLT M10X1.25X28	2	GB/T16674.1	B01041028A
7	70294	WASHER 31	3	LH520ATV.12-4	8G012000004
8	70295	O-RING 20X3	1	LH520ATV.12-5	8G012000005
9	70296	NUT M16X1.5	1	LH520ATV.12-6	8G012000006
10	70297	OUTPUT AXLE,RING REAR GEAR-BOX	1	LH520ATV.12-7	8G012000007
11	70298	INPUT AXLE,RING REAR GEAR-BOX	1	LH520ATV.12-8	8G012000008
12	70299	LOCK NUT	1	LH520ATV.12-9	8G012000009
13	70288	SEAL 30X55X11	2	LH520ATV.12.1	8G012010000
14	70289	SEAL 38X85X8	1	LH520ATV.12.2	8G012020000
15	70290	SEAL 38X80X8	1	LH520ATV.12.3	8G012030000
16	44104	BEARING 15NQ2815	1	170M.10.1	1L010010000
17	24305	OIL SCREEN CAP	1	153FM.16-3	1H016000003
18	50082	O-RING	1	153FM.16-6	1H016000006
19	20818	WASHER	1	153FM.18-2	1H018000002
20	20817	OIL PLUG	1	153FM.18-3	1H018000003
21	21340	VENT TUBE FITTING	1	LH260ATV.17.2-1	8E017020001
22	70019	BEARING 6306	1	GB/T276	B1316306
23	10202	BEARING 6006	1	GB/T276	B1316006
24	27039	BEARING	1	GB/T276	B1316206

 13. KNUCKLE

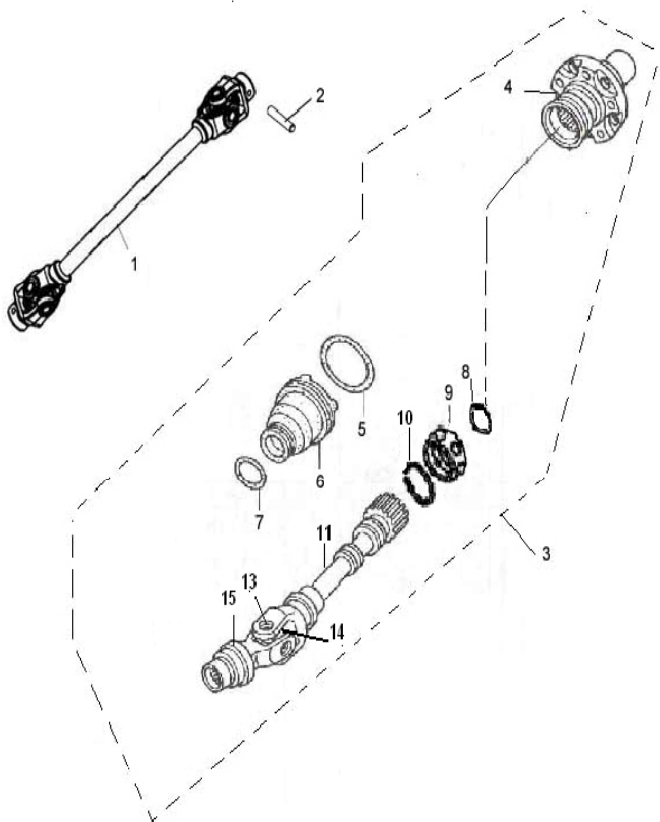


Ref#	Part#	Description	Qty	Linhai Code	Control Code
1	26730d	FRONT KNUCKLE	1	LH400CUV-2A.13.1	8TF13010000
2	20716	PIN 8	1	LH260ATV.13-1	8E013000001
3	27106	REAR KNUCKLE	1	LH400CUV-2.13.1	8T013010000
4	27094	JOINT, INBOARD	1	LH400CUV-2.13.1-1	8T013010001
5	27099	BOOT BAND A	1	LH400CUV-2.13.1-3	8T013010003
6	27101	OUTER BOARD BOOT	1	LH400CUV-2.13.1-5	8T013010005
7	27102	BOOT BAND B	1	LH400CUV-2.13.1-6	8T013010006
8	27098	CIRCLIPS FOR SHAFT	1	LH400CUV-2.13.1-2	8T013010002
9	27095	STEEL BALL BRACKET STEEL BALL AND GEAR WHEEL	1	LH400CUV-2.13.1-12	8T013010012
	27097		1	LH400CUV-2.13.1-14	8T013010014
	27096		6	LH400CUV-2.13.1-13	8T013010013
10	27100	STOPPER RING	1	LH400CUV-2.13.1-4	8T013010004
11	27103	SPLING AXLE	1	LH400CUV-2.13.1-7	8T013010007
13	70044	CIRCLIP 20	2	GB/T893.1	B036120
14	27079	U-JOINT CROSS	1	LH300CUV.13.2.1	8M013020100
15	27080	SPLINE AXIS JOINT	1	LH300CUV.13.2-4	8M013020004

 14. TRANSMISSION

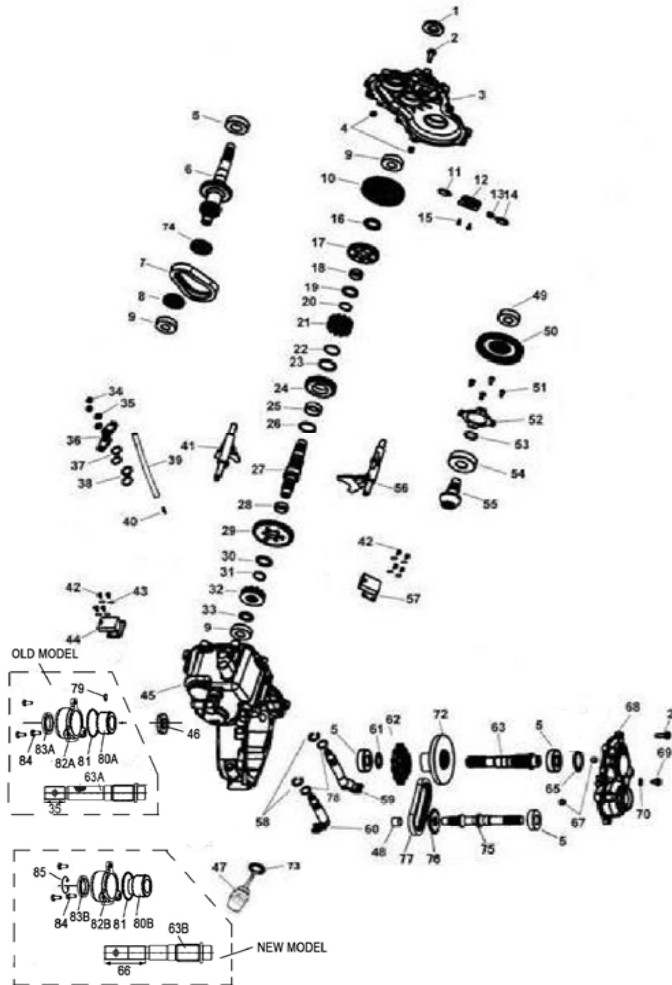


Ref#	Part#	Description	Qty	Linhai Code	Control Code
1	21201	SEAL 25X47X8	1	LH260ATV.17.6	8E017060000
2	10060	BOLT M8X28	17	GB/T16674.1-M8X28	B01040828
3	21203b	MAIN COVER (USE WITH HIGH-POWER CLUTCH)	1	LH260ATV.17-6b	8E017000006b
4	21104	DOWEL PIN	2	LH260ATV.17-17	8E017000017
5	10061	BEARING 6205c3	3	GB/T276	B1316205
6	21206b	INPUT SHAFT 29T	1	LH260ATV.17.1-14d	8E017010014d
7	21207	CHAIN	1	LH260ATV.17.1.3	8E017010300
8	21208	GEAR 16T	1	LH260ATV.17.1-12	8E017010012
9	10062	BEARING 6204	3	GB/T276	B1316204
10	21210A	GEAR, HELICAL 31T	1	LH260ATV.17.1-2a	8E017010002a
11	21211	INTERLOCK PIN	2	LH260ATV.17-2	8E017000002
12	21212	INTERLOCK BRACKET	1	LH260ATV.17-4	8E017000004
13	21213	SPRING	1	LH260ATV.17-3	8E017000003
14	21211	INTERLOCK PIN	1	LH260ATV.17-2	8E017000002
15	10001	SCREW M5X12	2	GB/T818	B02020512
16	21216	SPACER	1	LH260ATV.17.1-3	8E017010003
17	21217	GEAR 31T	1	LH260ATV.17.1-4	8E017010004
18	21218	NEEDLE BEARING 25	1	LH260ATV.17.1.1	8E017010100
19	21219	THRUST WASHER	1	LH260ATV.17.1-5	8E017010005
20	10064	SNAP RING	1	GB/T894.1	B036225
21	21221	DOG GEAR	1	LH260ATV.17.1-6	8E017010006
22	10065	SNAP RING	1	GB/T894.1	B036232
23	21223	THRUST WASHER	1	LH260ATV.17.1-7	8E017010007

 14. TRANSMISSION

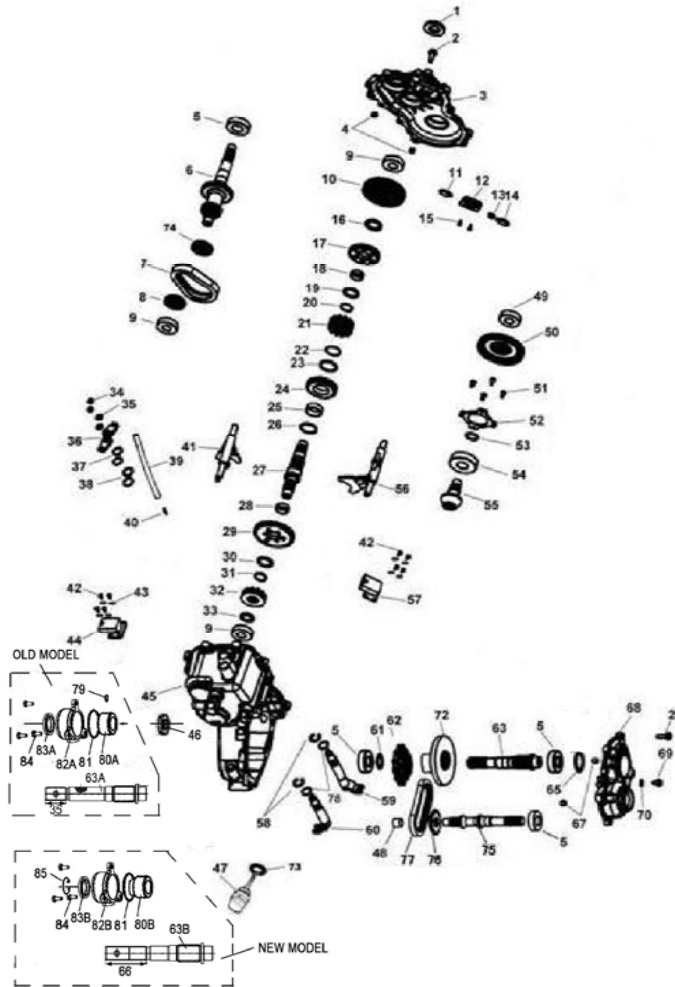


Ref#	Part#	Description	Qty	Linhai Code	Control Code
24	21224	SPROCKET 24T	1	LH260ATV.17.1-8	8E017010008
25	21225	NEEDLE BEARING 25	1	LH260ATV.17.1.2	8E017010200
26	21223	THRUST WASHER	1	LH260ATV.17.1-7	8E017010007
27	21327	SHAFT	1	LH260ATV.17.1-1	8E017010001
28	21218	NEEDLE BEARING 25	1	LH260ATV.17.1.1	8E017010100
29	21329	GEAR 35T	1	LH260ATV.17.1-9	8E017010009
30	21223	THRUST WASHER	1	LH260ATV.17.1-7	8E017010007
31	10064	SNAP RING	1	GB/T894.1-25	B036225
32	21332	ENGAGEMENT	1	LH260ATV.17.1-10	8E017010010
33	21333	THRST WASHER	1	LH260ATV.17.1-11	8E017010011
34	10067	NUT M8	2	GB/T6184	B015308
35	10068	WASHER 8	2	GB/T97.1	B025308
36	21336	BELLCRANK	2	LH260ATV.17-8	8E017000008
37	10069	SNAP RING	2	GB/T894.1	B036219
38	21338	WASHER	2	LH260ATV.17-9	8E017000009
39	21339	VENT TUBE	1	LH260ATV.17-7	8E017000007
40	21340	VENT TUBE FITTING	1	LH260ATV.17.2-1	8E017020001
41	21341	SHIFT FORK HIGH/REVERSE	1	LH260ATV.17-1	8E017000001
42	10007	SCREW M4	8	GB/T818	B02020410
43	10071	WASHER 4	8	GB/T97.1	B025304
44	21344	GEAR INDICATOR SWITCH	1	LH260ATV.19.10	8E019100000
45	21345b	GEARCASE,RH (USE WITH SPEED SENSOR)	1	LH260ATV.17.2a	8E017020000a
46	21201	SEAL 25X47X8	1	LH260ATV.17.6	8E017060000

 14. TRANSMISSION

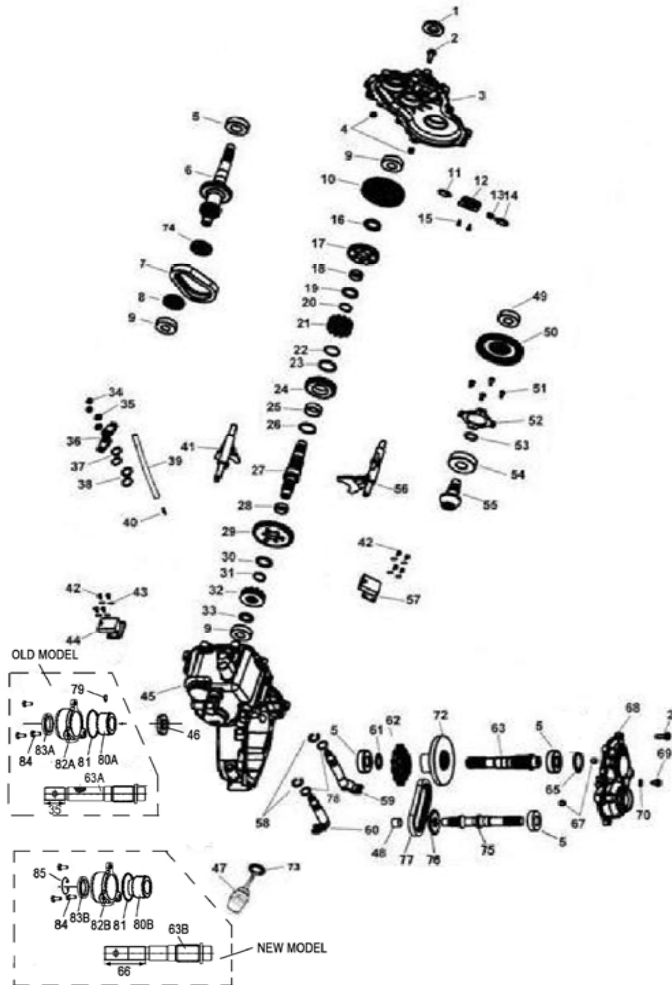



Ref#	Part#	Description	Qty	Linhai Code	Control Code
47	21475	DIPSTICK	1	153FM.16-5	1H016000005
48	10219	SCREW	1	GB/T71	B02500406
49	10063	BEARING 6204C3	1	GB/T276	B1316204
50	25109	GEAR HELICAL 51T	1	LH260ATV.17-16a	8E017000016a
51	10073	SCREW M6X10	4	GB/T67	B02040610
52	21351	BEARING RETAINER PLATE	1	LH260ATV.17-15	8E017000015
53	21453	SNAP RING	1	LH260ATV.17-14	8E017000014
54	10074	BEARING 6305ST	1	GB/T276	B1316305
55	21455	PINION SHAFT 10T	1	LH260ATV.17-13	8E017000013
56	21456	SHIFT FORK LOW	1	LH260ATV.17-5	8E017000005
57	21457	GEAR INDICATOR SWITCH	1	LH260ATV.19.11	8E019110000
58	10075	SNAP RING	2	GB/T896-15	B036315
59	21459	SHIFT ROD LOW	1	LH260ATV.17.4	8E017040000
60	21460	SHIFT ROD HIGH/REVERSE	1	LH260ATV.17.3	8E017030000
61	21461	THRUST WASHER	1	LH260ATV.17-20	8E017000020
62	21462	GEAR	1	LH260ATV.17-18	8E017000018
63	21463	SHAFT REAR OUTPUT	1	LH260ATV.17-19	8E017000019
63B	70354	SHAFT REAR OUTPUTA (USE WITH SPEED SENSOR) (NEW MODEL)	1	LH520ATV.17-19	8G017000019
65	21465	SHIM 1	1	LH260ATV.17-22	8E017000022
67	21104	DOWEL PIN	1	LH260ATV.17-17	8E017000017
68	21468	COVER	1	LH260ATV.17-21	8E017000021
69	21469	DRAIN SCREW	1	LH260ATV.17.5	8E017050000
70	21470	WASHER	1	LH260ATV.17-12	8E017000012

 15. SUPPORT BRACKET

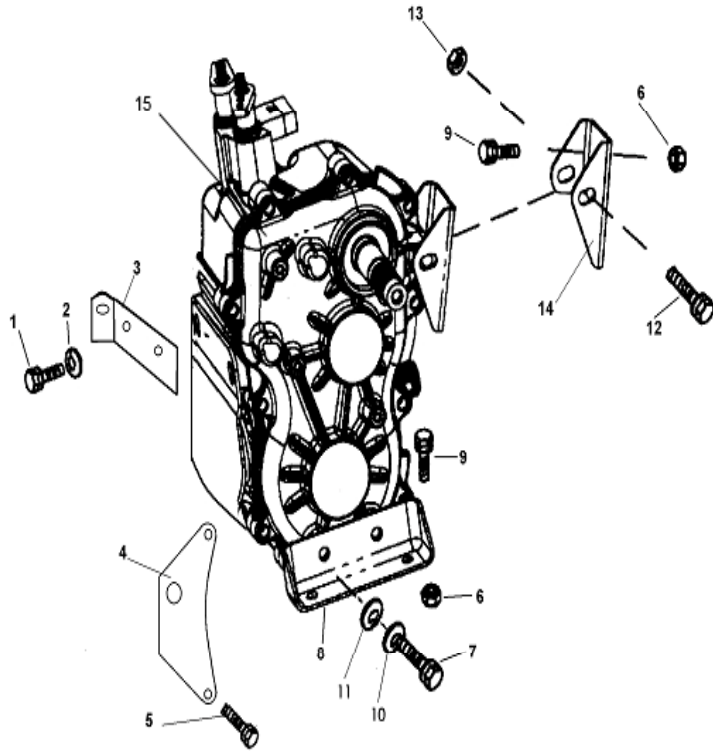


Ref#	Part#	Description	Qty	Linhai Code	Control Code
1	10076	BOLT M12X20	2	GB/T70.1-M12X20	B02011220
2	10054	WASHER 12	2	GB/T93-12	B025112
3	27292	TRANSMISSION MOUNTING BRACKET RIGHT	1	LH400ATV.20.2	8N020020000
4	21504	TRANSMISSION MOUNTING BRACKET LEFT	1	LH260ATV.20.4	8E020040000
5	10078	BOLT M8X30	3	GB/T16674.1	B01040830
6	10079	NUT M8	3	GB/T6187	B015508
7	10028	BOLT M10X25	2	GB/T5783	B01011025
8	21508	TRANSMISSION MOUNTING BRACKET BOTTOM	1	LH260ATV.1-7	8E001000007
9	10081	BOLT M8X20	3	GB/T16674.1	B01040820
10	10027	WASHER 10	2	GB/T93	B025110
11	10019	WASHER	2	GB/T97.1	B025310
12	10084	BOLTM10X1.25X70	1	GB/T5785	B01071070A
13	10015	NUT M10	1	GB/T6187	B015510A
14	21514	TRANSMISSION MOUNTING BRACKET REAR	1	LH260ATV.1-8	8E001000008
15	26282	TRANSMISSION ASSY(4WD, FOR SPEED SENSOR)	1	LH260ATV.17(sj)	8E017sj000000

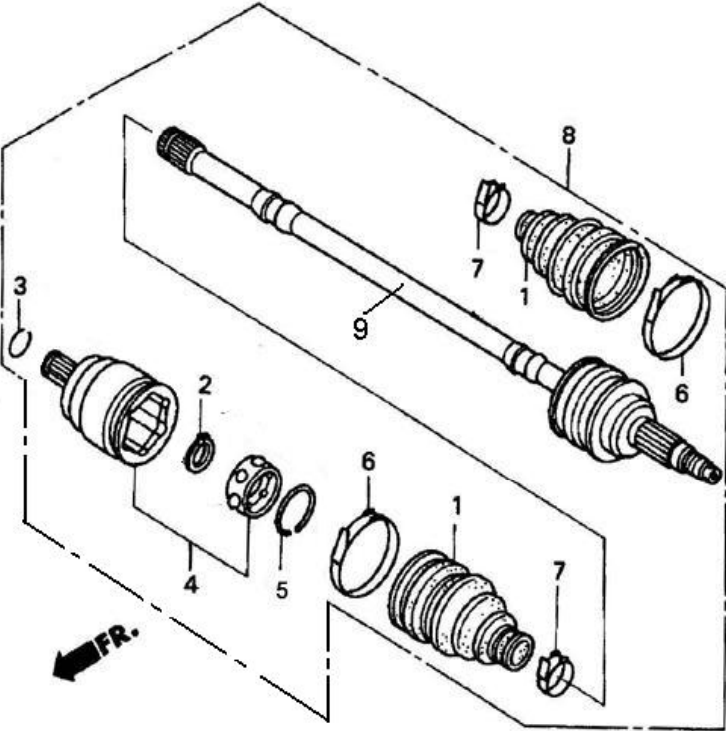 16. FRONT DRIVE AXLE (FOR 4WD) (OLD MODEL)		Ref#	Part#	Description	Qty	Linhai Code	Control Code
		1	24403	OUTER BOARD BOOT	4	LH260ATV.6.5-5	8E006050005
		2	24407	CIRCLIP 20	2	GB/T894.1	B036220
		3	24405	ATOPPER RING	2	LH260ATV.6.5-16	8E006050014
		4	70961	JOINT,INBOARD(CONTAIN INBOARD AXLE STEEL BALL BRACKET STEEL BALL AND GEAR WHEEL)	2	LH260ATV.6.5-13	8E006050013
			25535		2	LH260ATV.6.5-12	8E006050012
			25534		2	LH260ATV.6.5-11	8E006050011
			25533		6	LH260ATV.6.5-10	8E006050010
		5	24409	STOPPER RING	2	LH260ATV.6.5-9	8E006050009
		6	24404	BOOT BAND B	4	LH260ATV.6.5-4	8E006050004
		7	24402	BOOT BAND A	4	LH260ATV.6.5-6	8E006050006
		8	27111	FRONT DRIVE AXLE	2	LH400CUV-2.19	8M019000000
		9	27089	DRIVE AXLE/OUTER CV JOINT ASSEMBLY	2	LH400ATV.6.5-1	8M019000001
			/		2	LH260ATV.6.5-2	8E006050002
			/		12	LH260ATV.6.5-3	8E006050003
			27081		2	LH300CUV.19-2	8M019000002
			24405		2	LH260ATV.6.5-16	8E006050016
			/		2	LH260ATV.6.5-15	8E006050015

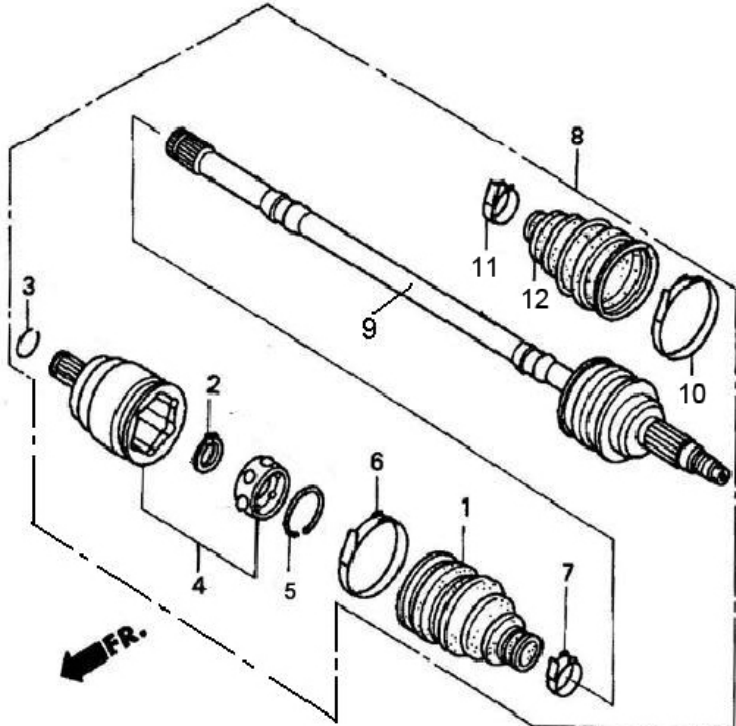 
16A. FRONT DRIVE AXLE (FOR 4WD) (NEW MODEL)		Ref#	Part#	Description	Qty	Linhai Code	Control Code
		1	/	OUTER BOARD BOOT "B"	2	4CD-2511B-00	
		2	/	CIRCLIP	2	4CD-2511H-00	
		3	/	ATOPPER RING	2	4CD-2511J-00	
		4	/	JOINT,INBOARD(CONTAIN INBOARD AXLE STEEL BALL BRACKET STEEL BALL AND GEAR WHEEL)	2	4CD-2511I-00	
			/		2	4CD-2511G-00	
			/		12	4CD-2511F-00	
			/		2	4CD-2511E-00	
		5	/	STOPPER RING "B"	2	4CD-2511C-00	
		6	/	BOOT BAND B	2	4CD-2511D-00	
		7	/	BOOT BAND B	2	4CD-2511A-00	
		8	27111d	FRONT DRIVE AXLE	2	4CD-25110-00	
		9	/	DRIVE AXLE/OUTER CV JOINT ASSEMBLY	2	4CD-25111-00	
/	2		4CD-25116-00				
/	12		4CD-25114-00				
/	2		4CD-25119-00				
/	2		4CD-25112-00				
/	2		4CD-25115-00				
10	/	BOOT BAND A	2	4CD-25113-00			
11	/	BOOT BAND A	2	4CD-25118-00			
12	/	OUTER BOARD BOOT "A"	2	4CD-25117-00			

 17. ENGINE

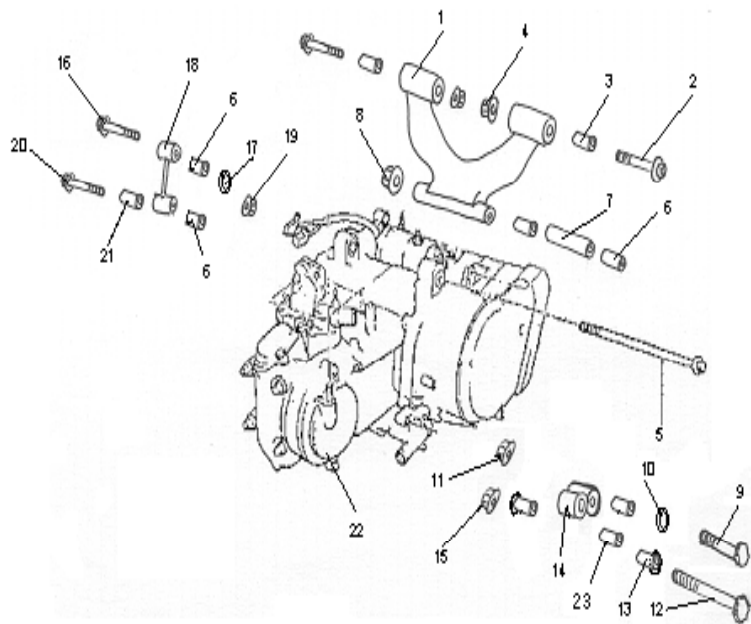


Ref#	Part#	Description	Qty	Linhai Code	Control Code
1	27291	FRONT ENGINE MOUNT BRACKET	1	LH400ATV.20.1.1	8N020010100
2	24202	ENGINE BRACKET BOLT	2	LH260ATV.20-2	8E020000002
3	24203	BUSHING ENGING BRACKET1	2	LH260ATV.20.1.2	8E020010200
4	10136	NUT M12X1.25	2	GB/T6187-M12X1.25	B015512A
5	27294	ENGINE MOUNTING BOLT	1	LH400ATV.20-2	8N020000002
6	24206	BUSHING ENGING BRACKET2	4	LH260ATV.20.1.3	8E020010300
7	27293	SPACER ENGINE BRACKET	1	LH400ATV.20-1	2N020000001
8	27293	NUT M10X1.25	1	GB/T6187-M10X1.25	B015510A
9	10015	BOLT M10X1.25X55	1	GB/T5785-M10X1.25X55	B01071055A
10	27295	WASHER	1	LH400ATV.20-3	2N020000003
11	10015	NUT M10X1.25	1	GB/T6187-M10X1.25	B015510A
12	10137	BOLT M8X120	1	GB/T5782-M8X120	B010608120
13	24213	LEFT SPACER	2	LH260ATV.20-3	8E020000003
14	24214	STAY ENGINE LEFT	1	LH260ATV.20.2	8E020020000
15	10079	NUT M8	1	GB/T6187-M8	B015508
16	10138	BOLT M10X1.25X68	1	GB/T5785-M10X1.25X68	B01071068A
17	24217	WASHER	1	LH260ATV.20-6	8E020000006
18	24218	STAY ENGINE RIGHT	1	LH260ATV.20.3	8E020030000
19	10015	NUT M10X1.25	1	GB/T6187-M10X1.25	B015510A
20	10139	BOLT M8X65	1	GB/T5782-M8X65	B01060865
21	24221	RIGHT SPACER	2	LH260ATV.20-5	8E020000005
22	27218	ENGINE ASSY	1	LH180MQ.0	1R000000000
23	24223	BUSHING	2	LH260ATV.20.2.2	8E020020200

 18. BUMPER

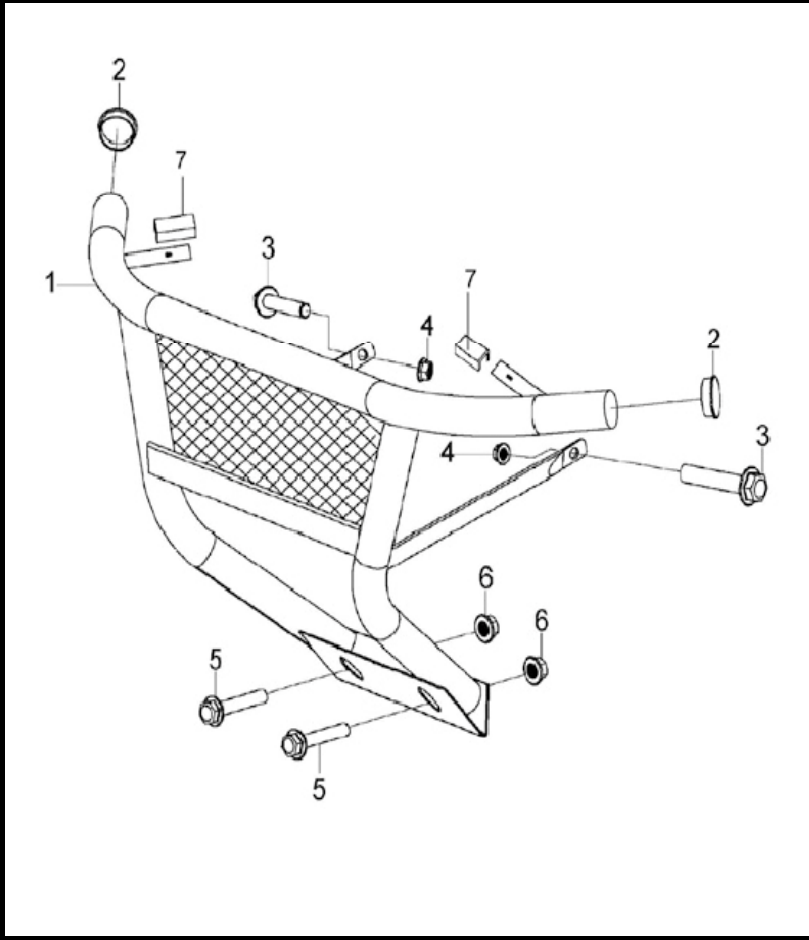[illegible]

 19. BOX ASSY

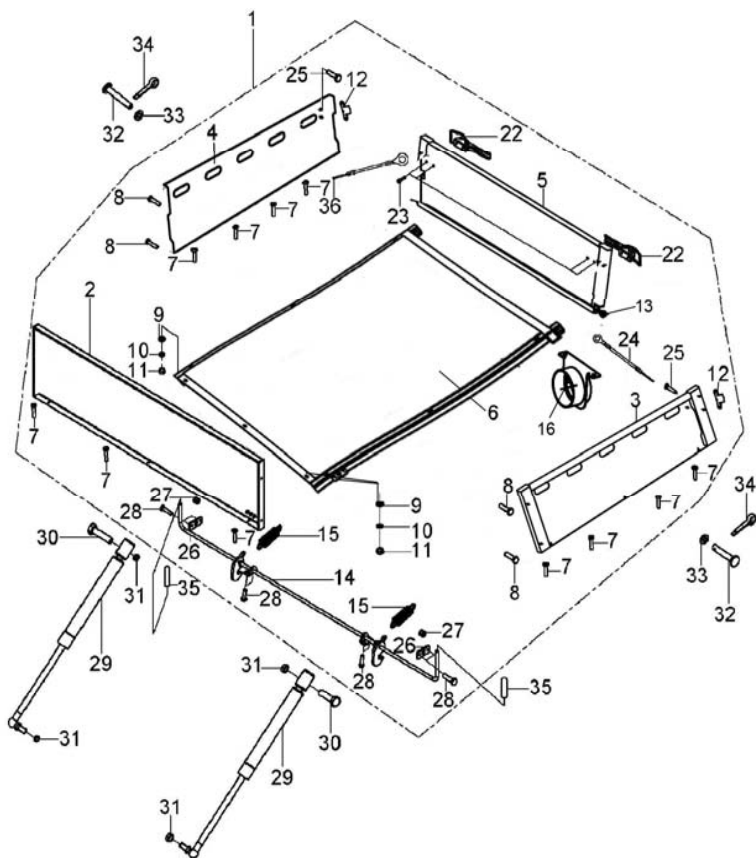

Ref#	Part#	Description	Qty	Linhai Code	Control Code
1	26971a	CARRIER BOX ASSY	1	LH400CUV-2A.22.1	8TF022010000
2	26972a	BOX COVER,FR	1	LH400CUV-2A.22.1.1	8TF22010100
3	26973a	BOX COVER,L	1	LH400CUV-2A.22.1.2	8TF22010200
4	26974a	BOX COVER,R	1	LH400CUV-2A.22.1.3	8TF22010300
5	26975a	BOX COVER,RR	1	LH400CUV-2A.22.1.4	8TF22010400
6	26976a	BOX FLOOR COVER	1	LH400CUV-2A.22.1.5	8TF22010500
7	10272	BOLT M6X16	11	GB/T5783	B01010616
8	26254	BOLT M6X40	4	GB/T5783	B01010640
9	10006	WASHER 6	15	GB/T97	B025306
10	10308	WASHER SPRING 6	15	GB/T93	B025106
11	10090	NUT M6	15	GB/T6170	B015806
12	26786g	HOOK	2	LH400CUV-2A.22-2	8TF220000002
13	Z1414	COLLAR	2	LH800U-D.22-1	8X022000001
14	26775a	LATCH ASSY	1	LH400CUV-2A.22.6	8TF22060000
15	26778	SPRING	2	LH300CUV.22.1-1	8M022010001
16	27167b	BRACKET,TAILLIGHT	2	LH400CUV-2A.22.2	8TF022020000
22	26767	LATCH	2	LH300CUV.22.1.10	8M022011000
23	10161	BOLT M6X65	4	GB/T16674.1	B01040665
24	26768	HOLDER CABLE, L	1	LH300CUV.22.1.11	8M022011100
25	10183	BOLT M6X16	2	GB/T16674.1	B01040616
26	26782	HOLDER,LATCH	2	LH300CUV.22.1-5	8M022010005
27	26783	RUBBER SHEATH	2	LH300CUV.22.1-6	8M022010006
28	10183	BOLT M6X16	8	GB/T16674.1	B01040616

19. BOX ASSY


Exploded view diagram of a box assembly (19. BOX ASSY). The diagram shows the main box body (1) with a lid (2) and a base (3). The lid is shown in an open position, revealing internal components like a hinge (16) and a latch (22). The base is shown with a latch (22) and a hinge (16). The diagram also shows a handle (29) with a grip (30) and a mounting bracket (31). Various screws (32, 33, 34) and washers (35) are shown being installed into the assembly. The diagram is labeled with numbers 1 through 36, indicating the different parts and their assembly points.

[illegible]


20.1 LAMP ASSY

[illegible]

 20.2 REFLECTION

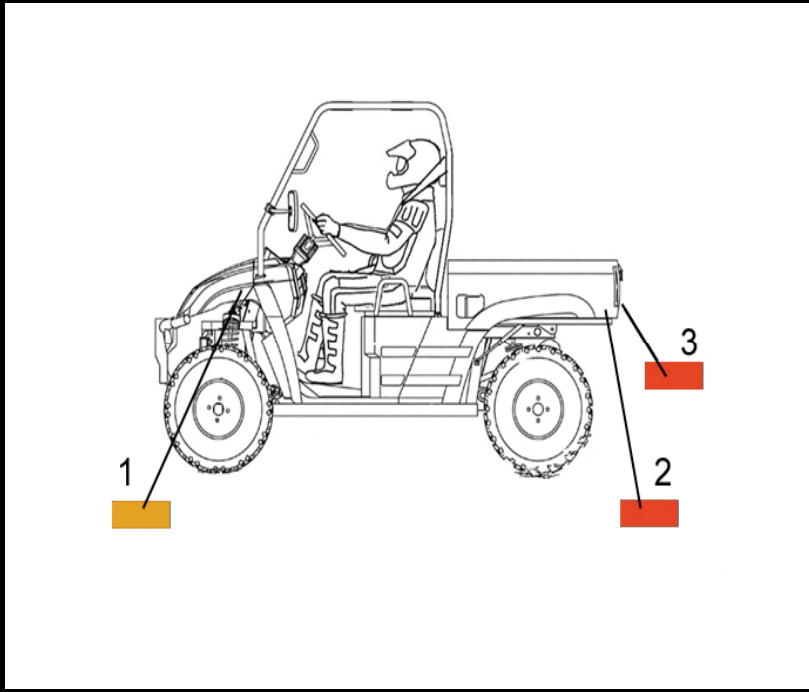
[illegible]

 20.3 ELECTRICAL SYSTEM

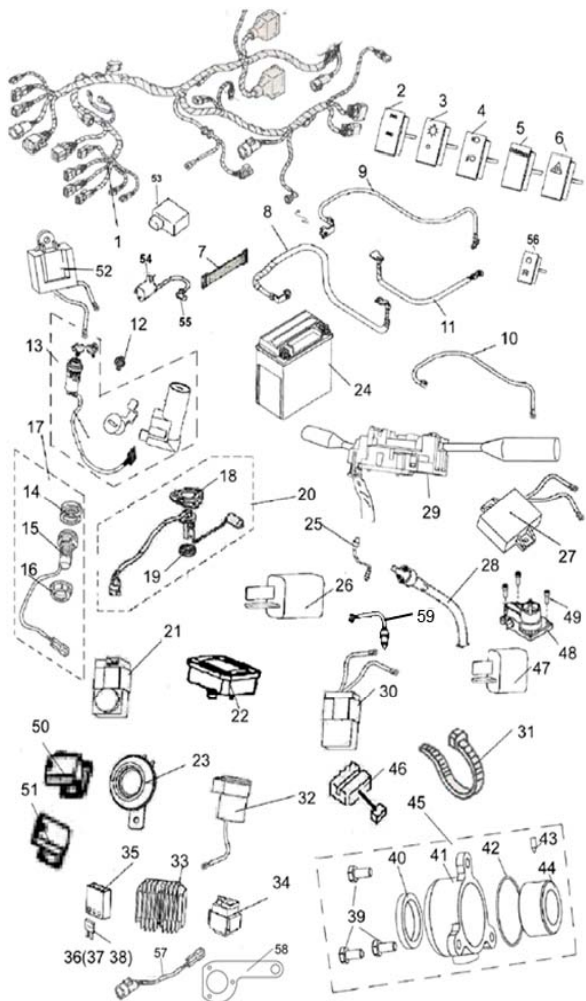


Ref#	Part#	Description	Qty	Linhai Code	Control Code
1	26787d	WIRING HARNESS (FOR USA)	1	LH400CUV-2A.23.1	8TF23010000
2	26809	SWITCH "2WD"/"4WD"	1	LH300CUV.23.8	8M023080000
3	27083	LIGHT SWITCH (ONLY FOR US)	1	LH300CUV.23.19	8M023190000
4	27082	HI/ LO BEAM SWITCH (ONLY FOR US)	1	LH300CUV.23.15	8M023150000
5	26796	OVERRIDE SWITCH	1	LH300CUV.23.12	8M023120000
7	27084	BATTERY BELT	1	LH300CUV.23.2	8M023020000
8	26788	STARTER WIRE 1	1	LH300CUV.23.1.1	8M023010100
9	26789	STARTER WIRE 2	1	LH300CUV.23.1.2	8M023010200
10	26790	STARTER WIRE 3	1	LH300CUV.23.1.3	8M023010300
11	26794	SENSOR CABLE	1	LH300CUV.23.13	8M023130000
12	26793	KEY BLANK	1	LH300CUV.23.11.1	8M023110100
13	26792	LOCK ASSY	1	LH300CUV.23.11	8M023110000
14	70401	CAP	1	LH520ATV.23.12.1	8G023120100
15	70402	SOCKET,ACCESSORY	1	LH520ATV.23.12.2	8G023120200
16	70403	NUT	1	LH520ATV.23.12.3	8G023120300
17	70400	ACCESSORY SOCKET ASSY	1	LH520ATV.23.12	8G023120000
18	26812	FUEL SENSOR FIXBOAD	1	LH300CUV.23.9.2	8M023090200
19	26811	FUEL SENSOR OIL-SEAL	1	LH300CUV.23.9.1	8M023090100
21	32038	REVERSE GEAR WARNING	1	LH260ATV.19.21	8E019210000
22	26993	LCD METER (FOR US)	1	LH520ATV.23.2a	8G02302a0000
24	70407	BATTERY (MTX14-BS)	1	LH520ATV.23.17	8G023170000
25	32020b	SPEED SENSOR	1	LH260ATV.19.16B	8E01916B0000

 20.3 ELECTRICAL SYSTEM

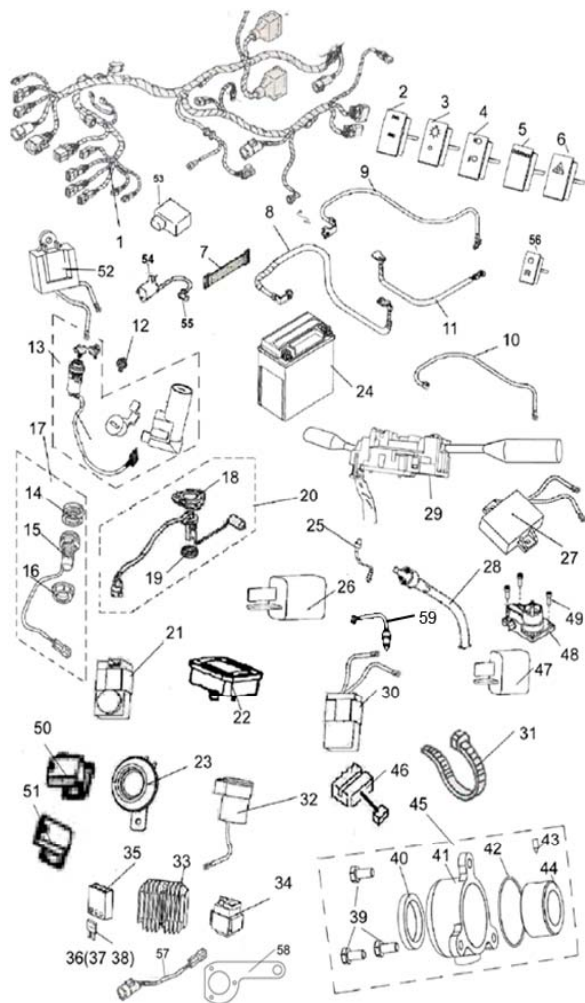


Ref#	Part#	Description	Qty	Linhai Code	Control Code
28	70405	PARKING SWITCH	1	LH520ATV.23.14	8G023140000
28A	70405-2	PARKING SWITCH (WATERPROOF)	1	LH520ATV.23.14f	8G02314f0000
30	22002a	REVERSE SPEED LIMITER	1	LH260ATV.19.8A	8E01908A0000
31	25530	TIE	20	ZD150X3.5	B90115035
32	1301159	FLASHER RELAY ASSY	1	LH150T.16.7	8U016070000
33	22007	REGULATOR RECTIFIER	1	LH250T.7.4	2W007040000
34	22004	STARTER RELAY	1	LH250T.7.3	2W007030000
35	70392	AMP FUSE BOX	1	LH520ATV.23.1.4	8G023010400
36	27025	7.5 AMP FUSE	1	LH520ATV.23.1.4-1	8G023010401
37	27026	10 AMP FUSE	1	LH520ATV.23.1.4-2	8G023010402
38	27027	15 AMP FUSE	1	LH520ATV.23.1.4-3	8G023010403
39	10010	BOLT	3	GB/T16674.1	B01040615
40	25529	SEAL	1	SPE175.5.5-1	6G005050001
41	25513	SPEED SENSOR COVER	1	LH260ATV.17.8-2	8E017080002
42	25512	O RING 50X1.5	1	LH260ATV.17.8-1	8E017080001
43	25507	SCREW	1	GB/T71	B02050409
44	25511	COLLAR	1	LH260ATV.17.8.1	8E017080100
45	21484	SPEED SENSOR	1	LH260ATV.17.8	8E017080000
46	32044	RESISTANCE	1	LH250T.7.5	2W007050000
47	26272	PROTECTOR	1	LH250T-B.16.3	2V016030000
48	24446	2WD/4WD SHIFT MOTOR	1	LHTY.1.8.1	T101080100
49	10183	BOLT M6X16	4	GB/T16674.1	B01040616
50	21344	GEAR INDICATOR SWITCH	1	LH260ATV.19.10	8E019100000

 20.3 ELECTRICAL SYSTEM

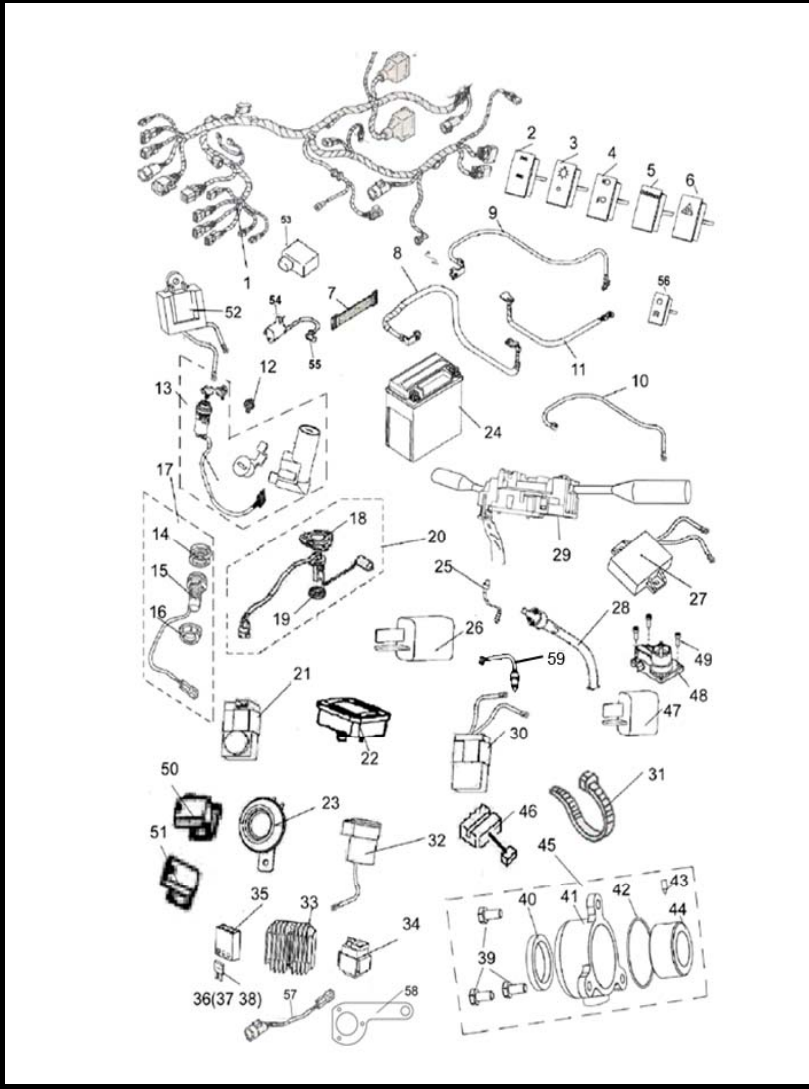
[illegible]

 21. BRAKING SYSTEM (FOR EUROPE)

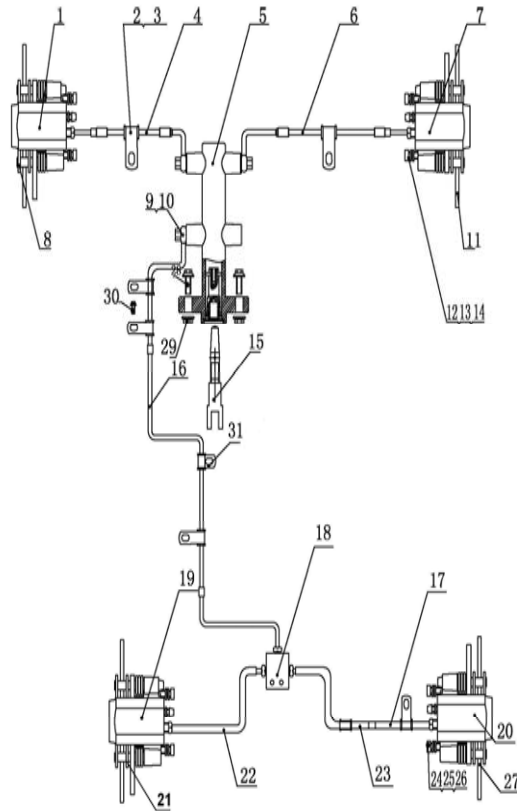


Ref#	Part#	Description	Qty	Linhai Code	Control Code
1	26822	BRAKE CALIPER , FR, L (SEE THE DETAIL ON P29)	1	LH300CUV.24.1	8M024010000
2	32104	CLAMP	4	LH260ATV.5.1a-1	8E005010100
3	32105	RUBBER TUBE 1, FR	4	LH260ATV.5.1a.-2	8E00501a0002
4	26840	FRONT BRAKE HOSE 1	2	LH300CUV.24.2	8M024020000
5	26841	MASTER BRAKE CYLINDER (SEE THE DETAIL ON P31)	1	LH300CUV.24.3	8M024030000
6	26857	RUBBER TUBE 2, FR	1	LH300CUV.24.4	8M024040000
7	26858	BRAKE CALIPER , FR, R (SEE THE DETAIL ON P	1	LH300CUV.24.5	8M024050000
8	26823	INSIDE/OUTSIDE PAD, FR	4	LH300CUV.24.1.1	8M024010100
9	70550	OIL BOLT	3	LH520ATV.24-4	8G024000004
10	70553		6	LH520ATV.24-5	8G024000005
11	27087	DISC BRAKE, FR	2	LH400ATV.5.5-1	8N005050001
12	10105	BOLT M8X25	4	GB/T5782	B01060825
13	10106	WASHER SPRING	4	GB/T93	B025108
14	10068	WASHER	4	GB/T97.1	B025308
15	26860	PUSH ROD	1	LH300CUV.24.6	8M024060000
16	27114	RUBBER TUBE , RR	1	LH400CUV-2.24.1	8T024010000
17	27115	RUBBER TUBE 1, RR	1	LH400CUV-2.24.2	8T024020000
18	32107	BRAKE LINE COUPLER	1	LH260ATV.5.1a-4	8E00501a0004
19	26863	BRAKE CALIPER , RR, L (SEE THE DETAIL ON P30)	1	LH300CUV.24.9	8M024090000
20	26827	BRAKE CALIPER , RR, R (SEE THE DETAIL ON P	1	LH300CUV.24.10	8M024100000
21	26864	INSIDE/OUTSIDE PAD, RR	4	LH300CUV.24.9.2	8M024090200
22	27116	RUBBER TUBE 2, RR	1	LH400CUV-2.24.3	8T024030000
23	27117	RUBBER TUBE 3, RR	1	LH400CUV-2.24.4	8T024040000

 21. BRAKING SYSTEM (FOR EUROPE)

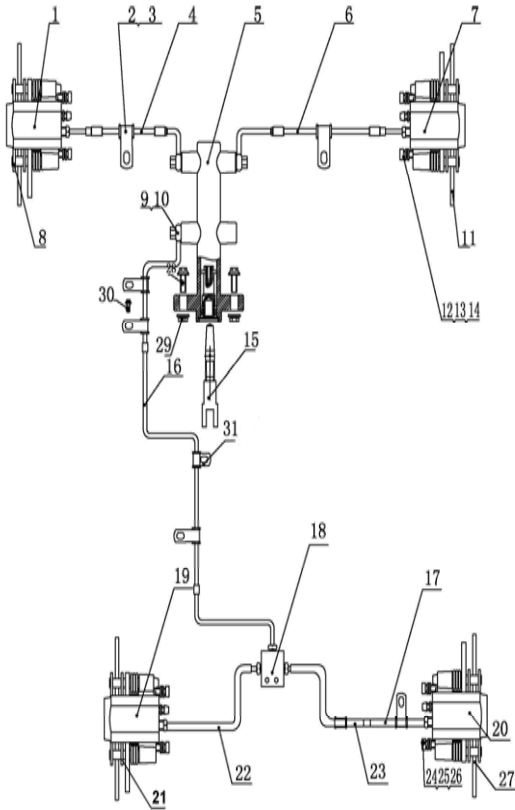
[illegible]

 21.1 BRAKE CALIPER , FR (FOR EUROPE)

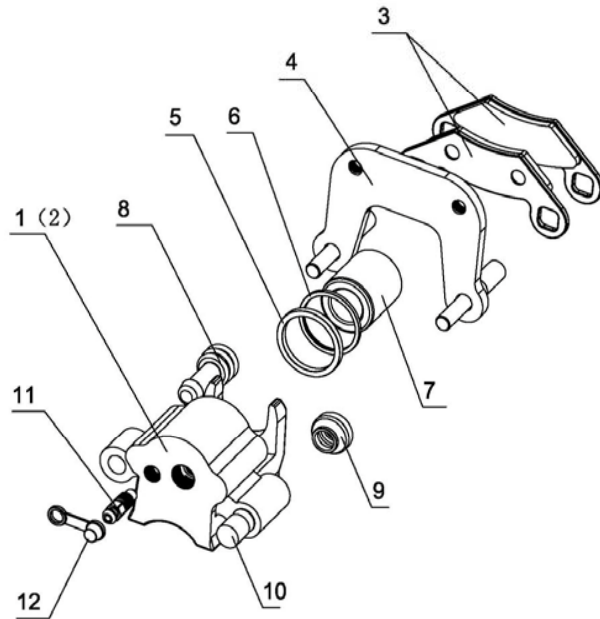


Ref#	Part#	Description	Qty	Linhai Code	Control Code
1	26830	CALIPER SHELL , L	1	LH300CUV.24.1-1	8M024010001
2	26859	CALIPER SHELL , R	1	LH300CUV.24.5-1	8M024050001
3	26864	INSIDE/OUTSIDE PAD, FR	2	LH300CUV.24.9.2	8M024090200
4	26824	BRACKET	1	LH300CUV.24.1.2	8M024010200
5	26832	DUSTPROOF COVER 1	1	LH300CUV.24.1-2	8M024010002
6	26833	CALIPER SEAL	1	LH300CUV.24.1-3	8M024010003
7	26834	PISTON	1	LH300CUV.24.1-4	8M024010004
8	26835	GUIDE SHIFT	1	LH300CUV.24.1-5	8M024010005
9	26836	DUSTPROOF COVER	1	LH300CUV.24.1-6	8M024010006
10	26837		1	LH300CUV.24.1-7	8M024010007
11	26838	BLOWHOLE	1	LH300CUV.24.1-8	8M024010008
12	26839	DUSTPROOF COVER 2	1	LH300CUV.24.1-9	8M024010009

 
21.2 BRAKE CALIPER , RR (FOR EUROPE)

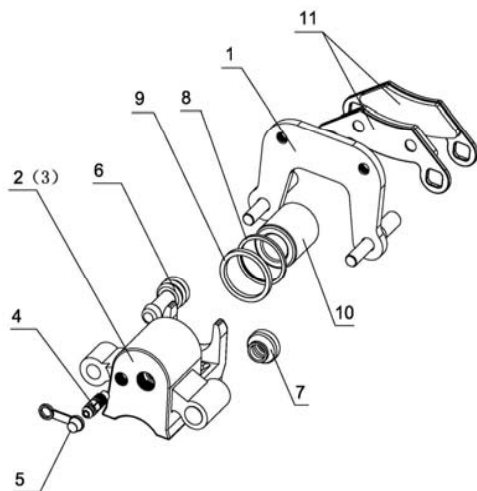


Ref#	Part#	Description	Qty	Linhai Code	Control Code
1	27003	BRACKET		LH300CUV.24.9-1	8M024090001
2	26865	CALIPER SHELL , L		LH300CUV.24.9-1	8M024090100
3	26828	CALIPER SHELL , R		LH300CUV.24.10-1	8M024100100
4	26838	BLOWHOLE		LH300CUV.24.1-8	8M024010008
5	26839	DUSTPROOF COVER 2		LH300CUV.24.1-9	8M024010009
6	26866	GUIDE SHIFT		LH300CUV.24.9-4	8M024090004
7	26867	DUSTPROOF COVER		LH300CUV.24.9-5	8M024090005
8	26868	SEAL		LH300CUV.24.9-6	8M024090006
9	27029	DUSTPROOF COVER 1		LH300CUV.24.9-7	8M024090007
10	27030	PISTON		LH300CUV.24.9-8	8M024090008
11	26864	INSIDE/OUTSIDE PAD, FR		LH300CUV.24.9-2	8M024090200

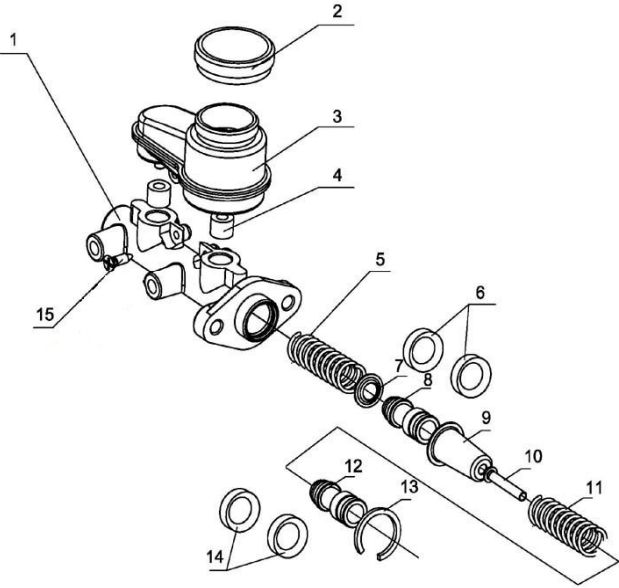 21.3 MASTER BRAKE CYLINDER (FOR EUROPE)		Ref#	Part#	Description	Qty	Linhai Code	Control Code
		1	26842	CALIPER SHELL	1	LH300CUV.24.3-1	8M024030001
		2	26849	CAP	1	LH300CUV.24.3-2	8M024030002
		3	26850	RESERVOIR	1	LH300CUV.24.3-3	8M024030003
		4	26851	SEAL	2	LH300CUV.24.3-4	8M024030004
		5	26852	SPRING	1	LH300CUV.24.3-5	8M024030005
		6	26853	RUBBER RING 1	3	LH300CUV.24.3-6	8M024030006
		7	26854	RING 1	1	LH300CUV.24.3-7	8M024030007
		8	26855	RING 2	1	LH300CUV.24.3-8	8M024030008
		9	26856	SPRING HOLDER	1	LH300CUV.24.3-9	8M024030009
		10	26843	BOLT	1	LH300CUV.24.3-10	8M024030010
		11	26844	SPRING	1	LH300CUV.24.3-11	8M024030011
		12	26845	PISTON	1	LH300CUV.24.3-12	8M024030012
		13	26846	CLIP	1	LH300CUV.24.3-13	8M024030013
		14	26847	RUBBER RING 2	1	LH300CUV.24.3-14	8M024030014
		15	26848	BOLT	1	LH300CUV.24.3-15	8M024030015

 22. AUXILIARY BRAKE

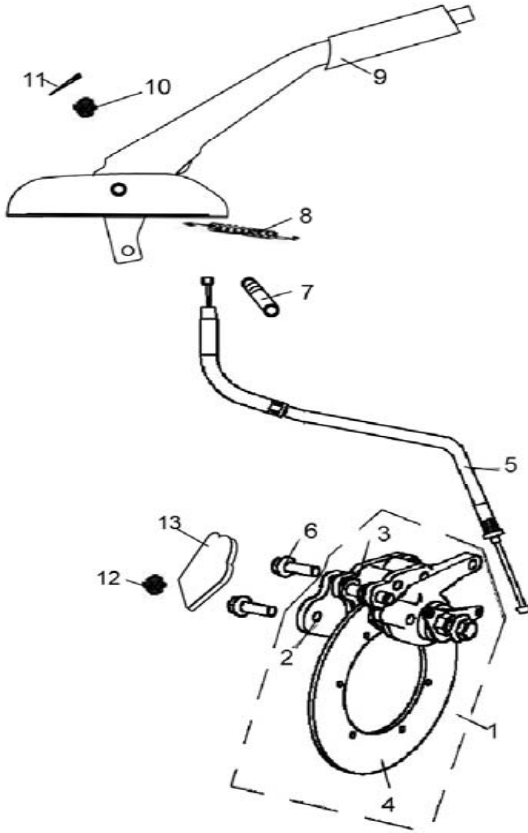
[illegible]

 22.1 BRAKE CALIPER

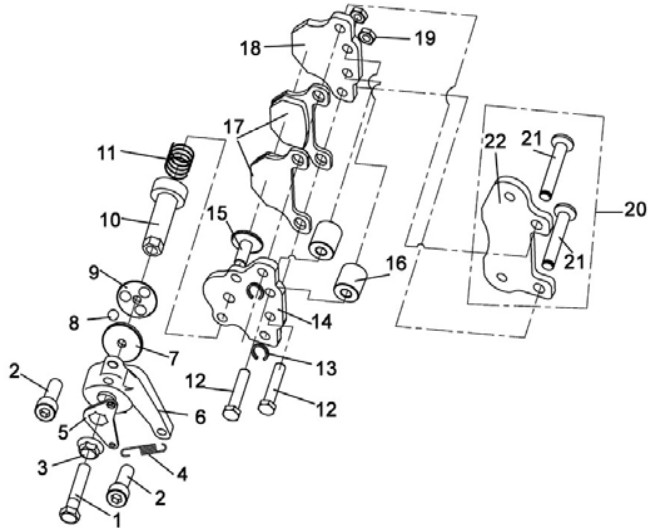


Ref#	Part#	Description	Qty	Linhai Code	Control Code
1	26293	BOLT	1	LH260ATV-B.26.2-1	8K026010001
2	10276	BOLT M8X25	2	GB/T70.1	B02010825
3	10080	NUT	1	GB/T 6177 M8	B015208
4	26297	SPRING	1	LH260ATV-B.26.2-6	8K026020006
5	26877	ROCKER	1	LH300CUV.26.1.1-1	8M026010101
6	26878	BRAKE CALIPER SHELL	1	LH300CUV.26.1.1-2	8M026010102
7	26296	UP RING	1	LH260ATV-B.26.2-5	8K026020005
8	10203	BALL	3	GB/T 308	B14104
9	27193	DOWN RING	1	LH260ATV-B.26.2-13	8K026020013
10	26295	MIDDLE STAFF	1	LH260ATV-B.26.2-3	8K026020003
11	26298	SPRING	1	LH260ATV-B.26.2-7	8K026020007
12	26271	BOLT M8X40	2	GB5780-86	B01010840
13	27032	CLIP	2	GB/T894.1-1986	B0362
14	26294	UP BRACKET	1	LH260ATV-B.26.2-11	8K026020011
15	26879	STAFF	1	LH300CUV.26.1.1-3	8M026010103
16	26880	COLLAR	2	LH300CUV.26.1.1-4	8M026010104
17	26291	BRAKE PAD	2	LH260ATV-B.26.2-1	8K026020100
18	27194	BRACKET	1	LH260ATV-B.26.2-12	8K026020012
19	26238	NUT	2	GB /T6172	B015608
20	26874	GUIDE STAFF ASSY	1	LH300CUV.26.1.1.1	8M02601010100
21	26875	GUIDE STAFF	2	LH300CUV.26.1.1.1-1	8M02601010101
22	26876	ORIENTATION BRACKET	1	LH300CUV.26.1.1.1-2	8M02601010102

 23. FRONT GEAR-BOX (FOR 4WD)

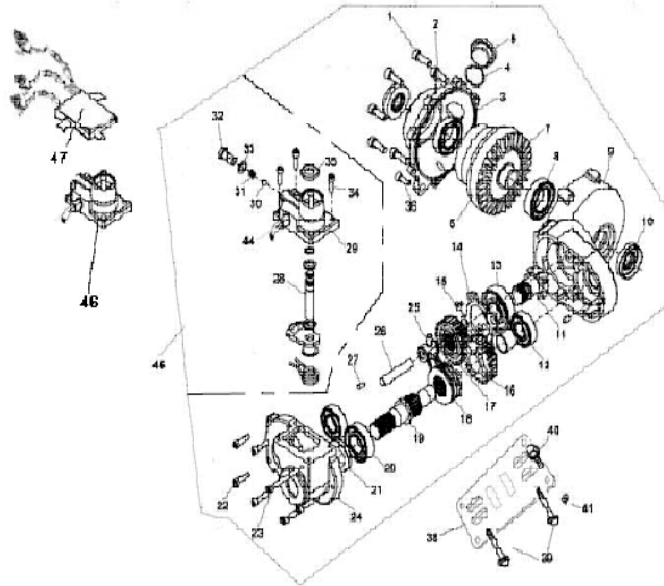


Ref#	Part#	Description	Qty	Linhai Code	Control Code
1	10059	BOLT M8X25	7	GB/T5787	B01040825
2	21112	VENT FITTING	1	LH260ATV.12.3	8E012030000
3	24303	LEFT COVER	1	LHTY.1-1	T1000001
4	10122	O-RING 18X2.65	1	GB/T3452.1	B121180265
5	24305	DIFF FILLERPLUG	1	153FM.16-3	1H016000003
6	24306	FOC BODY	1	LHTY.1.1	T1010000
7	24307	BEVEL CROWNWHEEL	1	LHTY.1-2	T1000002
8	10202	BEAR 6006	2	GB/T276	B1316006
9	24309	DIFFCASE RHS	1	LHTY.1-3	T1000003
10	24310	SEAL SDD722X48X11	2	LHTY.1.2	T1020000
11	24311	CONICAL WITH HELICAL GEARING	1	LHTY.1-4	T1000004
12	10062	BEAR 6204	2	GB/T276	B1316204
13	10074	BEAR 6305ST	1	GB/T276	B1316305
14	24314	CASEBEAR RETAINER	1	LHTY.1-5	T1000005
15	10287	SCREW M6X12	4	GB/T2673	B02060612
16	24316	DIFF GEAR	1	LHTY.1.3	T1030000
17	24317	DIFF GEAR DRIVEN	1	LHTY.1-6	T1000006
18	24318	SPLINED DOG	1	LHTY.1-7	T1000007
19	24319	DIFF INPUTSHAFT A	1	LHTY.1-8	T1000008
20	10267	BEAR 6205	1	GB/T276	B1316205
21	24321	SEAL TC25X47X7	1	LHTY.1.4	T1040000
22	10182	BOLE M6X30	6	GB/T5787	B01040630
23	10160	BOLE M6X70	1	GB/T5787	B01040670
24	24324	REAR COVER	1	LHTY.1-9	T1000009

 23. FRONT GEAR-BOX (FOR 4WD)

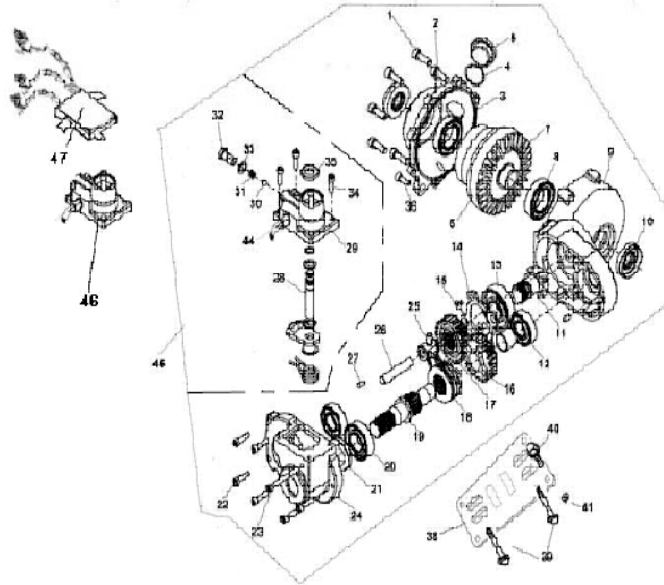


Ref#	Part#	Description	Qty	Linhai Code	Control Code
25	24325	DIFF SELECTOR FORK	1	LHTY.1-10	T1000010
26	24326	SELECTOR RAIL	1	LHTY.1-11	T1000011
27	24327	PIN	1	LHTY.1-12	T1000012
28	24328	SELECTOR SHAFT	1	LHTY.1.5	T1050000
29	24429	SELECTOR COVER	1	LHTY.1-13	T1000013
30	10203	STEEL BALL 8	1	GB/T308	B14108
31	24431	SPRING	1	LHTY.1-14	T1000014
32	24433	INDENT BALL INSERT	1	LHTY.1-15	T1000015
33	24432	WASHER	1	LHTY.1-16	T1000016
34	10183	BOLT M6X16	4	GB/T5787	B01040616
35	24435	SEAL TC12X28X7	1	LHTY.1.6	T1060000
36	10168	BOLT M8X16	1	GB/T5787	B01040816
38	22325f	FRONT GEAR-BOX BACKSTOP	1	LH260ATV.1.16	8E001160000
39	10208	BOLT M10X1.25X43	2	GB/T5787	B01041043A
40	10163	BOLT M10X1.25X20	4	GB/T5787	B01041020A
41	10209	NUT M10	6	GB/T6184	B015310
44	24444	4WD AND 2WD SWITCH	1	LHTY.1.7	T1070000
45	24445	FRONT GEAR-BOX	1	LHTY.1	T1000000
46	24446	2WD/4WD SHIFT MOTOR (USE WITH P/N 20109B)	1	LHTY.1.8.1	T1080100
47	24447a	2WD/4WD SHIFT ELECTRONIC CONTROLER(USED WITH 2WD / 4WD SWITCH)	1	LHTY.1.8.2a	T10802a00

 23.1 FOC BODY (FOR 4WD)

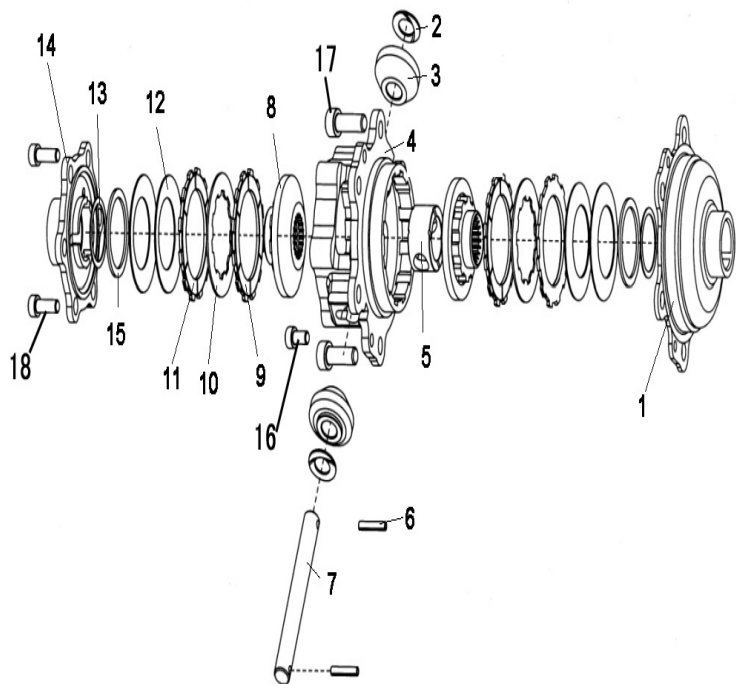

Ref#	Part#	Description	Qty	Linhai Code	Control Code
1	24701	LARGER COVER	1	LHTY.1.1-14	T101010014
2	24702	WASHER	2	LHTY.1.1-2	T101010002
3	24703	PINION	2	LHTY.1.1-3	T101010003
4	24704	HOUSING	1	LHTY.1.1-1	T101010001
5	24705	CENTER SPACER	1	LHTY.1.1-5	T101010005
6	10003	ROLL PIN	2	GB/T879	B03130422
7	24707	CENTER PIN	2	LHTY.1.1-4	T101010004
8	24708	BEVEL GEAR	2	LHTY.1.1-7	T101010007
9	24709	CLUTCH PLATE OUTER DOUBLE	2	LHTY.1.1-12	T101010012
10	24710	CLITCH PLATE INNER	2	LHTY.1.1-13	T101010013
11	24711	CLUTCH PLATE OUTER SINGLE	2	LHTY.1.1-11	T101010011
12	24712	DISHED SPRING	4	LHTY.1.1-8	T101010008
13	24713	WASHER	2	LHTY.1.1-10	T101010010
14	24714	SMALL COVER	1	LHTY.1.1-15	T101010015
15	24715	SPING SEAT	2	LHTY.1.1-9	T101010009
16	10083	SCREW M6X15	2	GB/T70	B02010615
17	10131	SCREW M8X16	6	GB/T70	B02010816
18	24718	BOLT M8X15	6	LHTY.1.1-6	T101010006

 24. REAR VIEW MIRROR ASSY

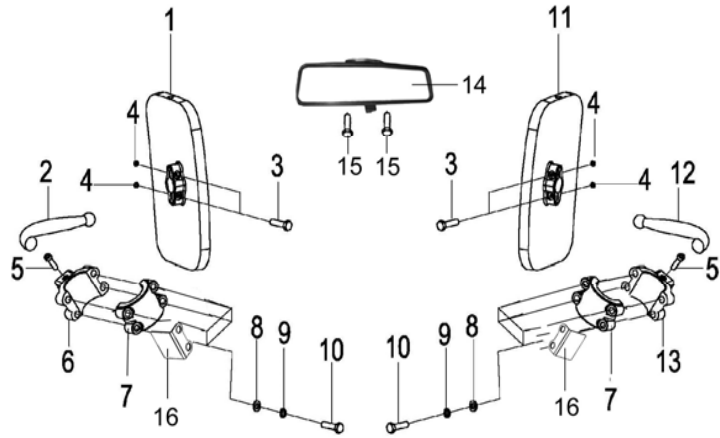


Ref#	Part#	Description	Qty	Linhai Code	Control Code
1	26887	REAR VIEW MIRROR,R	1	LH300CUV.28.1	8M028010000
2	26891	BALL JOINT,R	1	LH300CUV.28-1	8M028000001
3	26892	BOLT	4	LH300CUV.28-2	8M028000002
4	26893	NUT	4	LH300CUV.28-3	8M028000003
5	26894	BOLT	2	LH300CUV.28-4	8M028000004
6	26895	MIRROR HOLDER,R	1	LH300CUV.28-5	8M028000005
7	26896	MIRROR HOLDER 2	2	LH300CUV.28-6	8M028000006
8	10006	WASHER 6	8	GB/T97	B025306
9	10308	WASHER SPRING 6	8	GB/T93	B025106
10	26253	BOLT M6X25	8	GB/T5783	B01010625
11	26888	REAR VIEW MIRROR,L	1	LH300CUV.28.2	8M028020000
12	26897	BALL JOINT,L	1	LH300CUV.28-7	8M028000007
13	26898	MIRROR HOLDER,L	1	LH300CUV.28-8	8M028000008
14	26890	INTERIOR MIRROR	1	LH300CUV.28.4	8M028040000
15	26262	BOLT	2	GB/T818	B02020612
16	26889	BUMPER	2	LH300CUV.28.3	8M028030000

25. SAFETY BELT

This diagram illustrates the assembly of a safety belt. The main assembly consists of a rectangular buckle (1) with two straps. The top strap is attached to a D-ring (10) via a series of washers (8, 4, 5, 6). The bottom strap is attached to a smaller D-ring (9) via a series of washers (6, 5, 4, 9). A separate component (2) is shown on the left, which is a rectangular pad or cushion attached to a strap with a series of washers (6, 5, 4, 3). The diagram uses numbered callouts to identify the following parts:

- 1: Buckle
- 2: Rectangular pad/cushion
- 3: Washer
- 4: Washer
- 5: Washer
- 6: Washer
- 7: Washer
- 8: Washer
- 9: D-ring
- 10: D-ring

 [illegible]

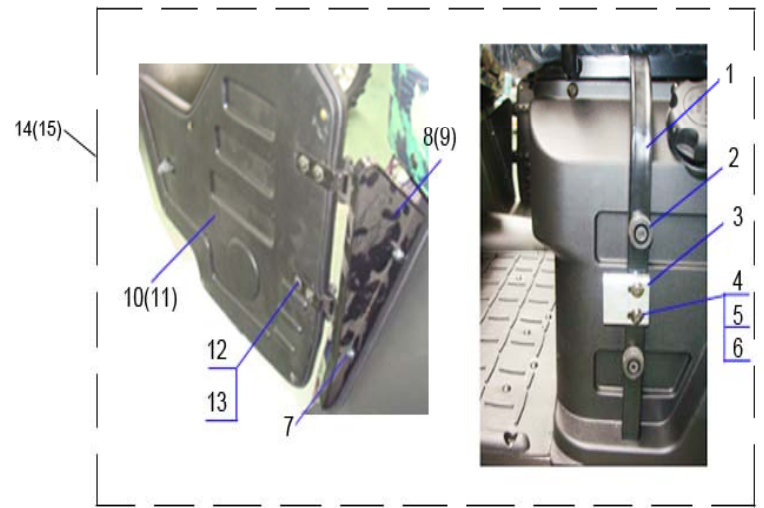26.DOOR		Ref#	Part#	Description	Qty	Linhai Code	Control Code
		1	27166	PIPE	2	LH400CUV-2.32.1.1	8T032010100
		2	25042	CUSHION	2	LH260ATV-B.9-1	8K009000001
		3	27167	BRACKET,LOCK	1	LH400CUV-2.32.1-1	8T032010001
		4	10183	BOLT M6x16	2	GB/T16674.1	B01040616
		5	10006	WASHER 6	2	GB/T97.1	B025306
		6	10308	WASHER SPRING 6	2	GB/T93	B025106
		7	10186	BOLT M6x35	2	GB/T16674.1	B01040635
		8	27168	BRACKET,DOOR,L	1	LH400CUV-2.32.1.5	8T032010500
		9	27169	BRACKET,DOOR,R	1	LH400CUV-2.32.1.6	8T032010600
		10	27170	DOOR,L	1	LH400CUV-2.32.1.3	8T032010300
		11	27171	DOOR,R	1	LH400CUV-2.32.1.4	8T032010400
		12	10081	BOLT M8X20	4	GB/T16674.1	B01040820
		13	26009	WASHER 8	4	GB/T96	B025208
		14	27172	LEFT DOOR ASSY	1	LH400CUV-2.32.1L	8T03201L0000
		15	27173	RIGHT DOOR ASSY	1	LH400CUV-2.32.1R	8T03201R0000


27.PROTECTOR COVER

The sequence of images shows the following steps:


1. A photograph of the interior of a vehicle showing the rear window area.
2. A photograph of the rear window area with a black frame installed.
3. A photograph of a long, thin, black rubber seal strip.
4. A photograph of a rectangular piece of material with a green and white pattern, likely a protective film or liner.
5. A photograph of the rear window area with the black frame and the patterned material installed.
6. A photograph of a black rubber seal strip being applied to the bottom of the window frame.
7. A photograph of the rear window area with the black frame and the patterned material installed.
- 8(9). A photograph of the rear window area with the black frame and the patterned material installed, showing the final result.

A diagram at the bottom left shows a mechanical linkage system with two arms and a pivot point, likely representing the window's operation mechanism.

 [illegible]

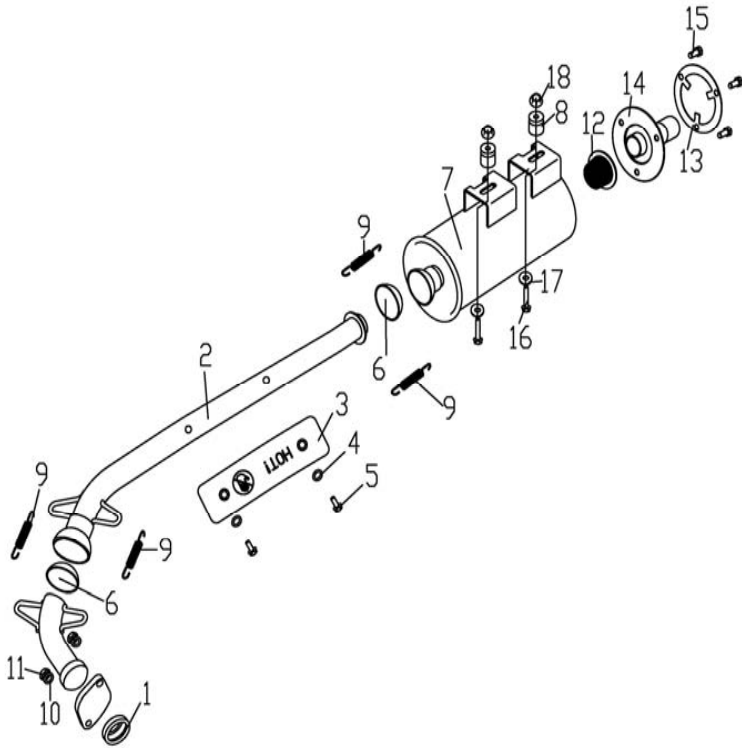
28. EXHAUST (FOR USA)	Ref#	Part#	Description	Qty	Linhai Code	Control Code
	1	23403	EXHAUST PIPE GASKET	1	170M.19.3	1L019030000
	2	27108	EXHAUST PIPE	1	LH400CUV-2.14.3	8V014010000
	3	27069	PROTECT,EXHAUST PIPE	1	LH300CUV.14-1	8M014000001
	4	10308	WASHER 6	5	GB/T93	B025106
	5	10140	BOLT M6X12	2	GB/T16674.1	B01040612
	6	25222	JOUNT	2	LH260ATV-B.14.3	8K014030000
	7	27107d	MUFFLER	1	LH400CUV-2A.14.1	8TF14010000
	8	23415	MUFFLER SUPPORT	2	LH260ATV.15.2	8E015020000
	9	23408	SPRING	4	LH260ATV.15-1	8E015000001
	10	10106	WASHER 8	2	GB/T93	B025108
	11	10099	NUT M8	2	GB/T6170	B015808
	12	7031a	FIRE SATELLITE NETWORK	1	LH520ATV.14.2.3	8G014020300
	13	7031b	STOPPER PLATE	1	LH520ATV.14.2-3	8G014020003
	14	27305	MUFFLER TAIL PIPE COMPONENTS	1	LH400ATV-2.14.3	8V014030000
	15	10272	BOLT M6X16	3	GB/T5783	B01010616
	16	10120	BOLT FLANGE M10X1.25X62	2	GB/T16674.1	B01041062A
	17	10117	WASHER PLATE 10	4	GB/T96	B025210

28. EXHAUST (FOR USA)

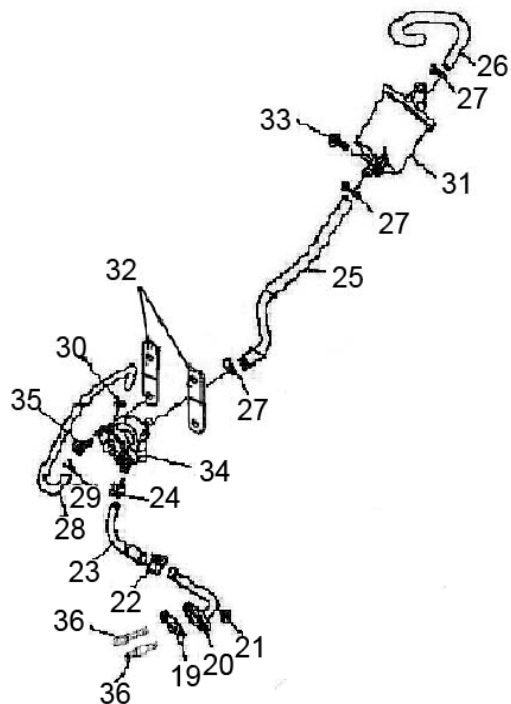


Ref#	Part#	Description	Qty	Linhai Code	Control Code
18	10015	NUT M10X1.25	2	GB/T6187	B015510A
19	43510	WASHER	1	170M.20-10	1L020000010
20	27155	HOSE	1	LH180MQ.20.3	1R020030000
21	10004	NUT M6	2	GB/T6187	B015506
22	43513	CLIP 16	1	170M.20-9	1L020000009
23	43512	HOSE C	1	170M.20-8	1L020000008
24	43514	CLIP 13	1	170M.20-4	1L020000004
25	43525	HOSE B	1	170M.20-3	1L020000003
26	43518	HOSE A	1	170M.20-1	1L020000001
27	43519	HOSE CLAMP 16	3	170M.20-2	1L020000002
28	43520	PIPE	1	170M.20-7	1L020000007
29	43521	CLIP 9	1	170M.20-6	1L020000006
30	43522	CLIP 7.6	1	170M.20-5	1L020000005
31	43523	FILTER	1	170M.20.1	1L020010000
32	27075	VALVE BRACKET	2	LH180MQ.20.4	1R020040000
33	10140	BOLT M6X12	2	GB/T16674.1	B01040612
34	43516	VALVE	1	170M.20.2	1L020020000
35	10110	BOLT M6X20	2	GB/T5789	B01030620
36	26003	BOLT	2	170M.20-11	1L020000011

 29. AIR CLEANER

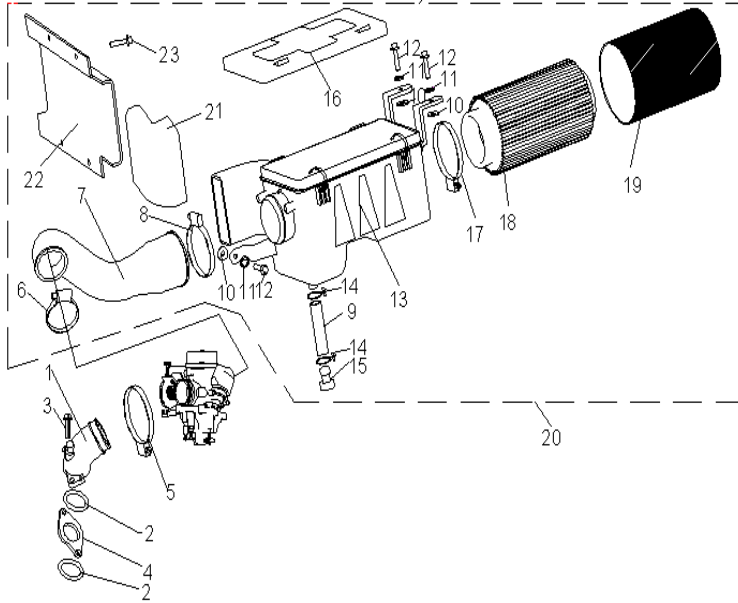


Ref#	Part#	Description	Qty	Linhai Code	Control Code
1	27164	CONNECTING BEND (FOR USA)	1	LH180MQ.13.1C	1R01301C0000
2	23202	O-RING 35X2	2	170M.17-13	1L017000013
3	10085	SCOKET HEAD BOLT M6X25	2	GB/T70	B02010625
4	23204	JOINT	1	170M.17-12	1L017000012
5	23205	HOSE CLAMP D	1	170M.17.4	1L017040000
6	26740	HOSE CLAMP C	1	LH300CUV.15.2	8M015020000
7	27219	AIR CLEANER JOINT (FOR USA)	1	LH180MQ.13.1	1R013010000
8	26739	HOSE CLAMP B	1	LH300CUV.15.1	8M015010000
9	26744	HOSE	1	LH300CUV.15-1	8M015000001
10	10011	WASHER 6	3	GB/T96	B025206
11	10308	WASHER 6	3	GB/T93	B025106
12	10182	BOLT M6X30	3	GB/T16674.1	B01040630
13	26742	AIR CLEANER CASE1	1	LH300CUV.15.4	8M015040000
14	23214	CLIP	2	LH260ATV.16-4	8E016000004
15	23216	PLUG	1	LH260ATV.16-5	8E016000005
16	26741	COVER AIR CLEANER	1	LH300CUV.15.3	8M015030000
17	23209	HOSE CLAMP A	1	LH260ATV.16.2	8E016020000
18	23212	ELEMENT COMP AIR CLEANER	1	LH260ATV.16.1	8E016010000
19	23213	FILTER COVER	1	LH260ATV.16.7	8E016070000
20	26737	AIR CLEANER	1	LH300CUV.15	8M015000000
21	26746	JOINT HOSE		LH300CUV.15-3	8M015000003
22	26747	DUSTPROOF COVER		LH300CUV.15-4	8M015000004

 30. RADIATOR (New Model)

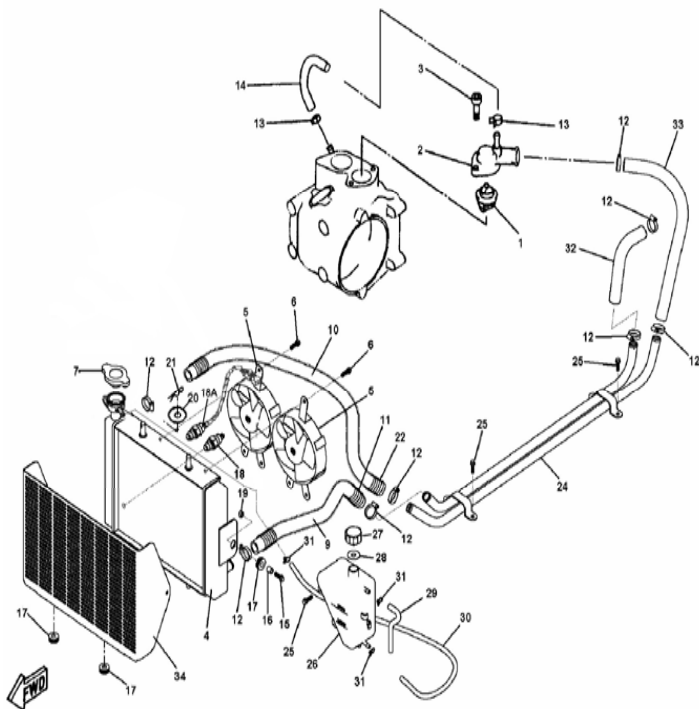


Ref#	Part#	Description	Qty	Linhai Code	Control Code
1	22901	THERMOSTAT	1	170M.11.7.2	1L011070200
1	22901A	THERMOSTAT(ONLY FOR ITALY)	1	170M.11.7.2a	1L0110702a00
2	22902	THERMOSTAT COVER	1	170M.11.7.1	1L011070100
3	10085	SOCKET HEAD BOLT M6X25	2	GB/T70	B02010625
4	27701	RADIATOR ASSY (THICKER)-New Model	1	LH400CUV-2B.16.3	8a016030000
5	26235	BLOWER ASSY	2	170M.11.2b	1L01102b000
5	26235A	BLOWER ASSY (USED FOR WATERPROOF PLUG UNIT)	2	170M.11.2c	1L11102c0000
6	10087	FLANGE BOLT M6X9	6	GB/T16674.1	B01040609
7	22907	SAFETY VALVE	1	170M.11.1.1	1L011010100
9	27702	RETURN HOSE	1	LH400CUV-2A.16-2	8TF16000002
10	27703	FEED HOSE	1	LH400CUV-2A.16-1	8TF16000001
11	22912	SPRING CIMPRESSON	1	170M.11-10	1L011000010
12	70140	CLAMP 16/27	8	LH2V70.12.1	1P012010000
13	22914	HOSE CLAMP2	2	170M.1-7	1L001000007
14	27154	HOSE1	1	LH180MQ.1-8	1R001000008
15	10110	BOLT M6X20	2	GB/T5787	B01040620
16	22917	RADIATOR SIDE SUPT GROMMET	2	170M.11-5	1L011000005
17	22918	COLLAR	2	170M.11-6	1L011000006
18	22919	THERMOSTAT SWITCH ASSY	1	170M.11.4	1L011040000
18	22919A	THERMOSTAT SWITCH ASSYUSED FOR WATERPROOF PLUG UNIT)	1	1BD-12486-00	
19	10004	NUT M6	2	GB/6187-M6	B015506
20	10019	WASHER PLATE 10	2	GB97-10	B025310

 30. RADIATOR (New Model)

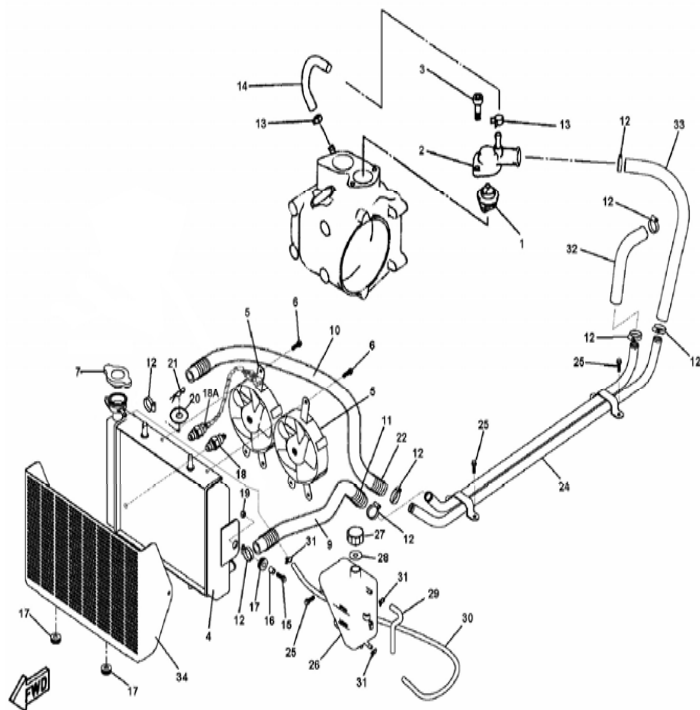

Ref#	Part#	Description	Qty	Linhai Code	Control Code
21	10094	CLIP 2X20	2	GB91-2X20	B03110220
22	22912a	COMPRESSION SPRING	2	170M-A.11-10	1L111000010
23	70344	CLAMP 20/32	2	LH520ATV.16.4	8G016040000
24	26750	BRACKET	1	LH300CUV.16.2	8M016020000
25	10140	BOLT M6X12	2	GB/T16674.1	B01040612
26	70340	TANK RECOVERY	1	LH520ATV.16.2-1	8G016020001
27	70338	COVER,TANK RECOVERY	1	LH520ATV.16.2.1-1	8G016020101
28	70339	WASHER,TANK RECOVERY	1	LH520ATV.16.2.1-2	8G016020102
29	70342	PIPE,TANK RECOVERY	1	LH520ATV.16.2-3	8G016020003
30	27704	PIPE	1	LH400CUV.16.1-1	8T016010001
31	22924	CLAMP	1	170M.11.6-5	1L011060005
32	26755	FEED HOSE, VALVE	1	LH300CUV.16-3	8M016000003
33	26756	RETURN HOSE, CYLINDER	1	LH300CUV.16-4	8M016000004
34	26757	FENDER		LH300CUV.16-6	8M016000006

 31. CYLINDER

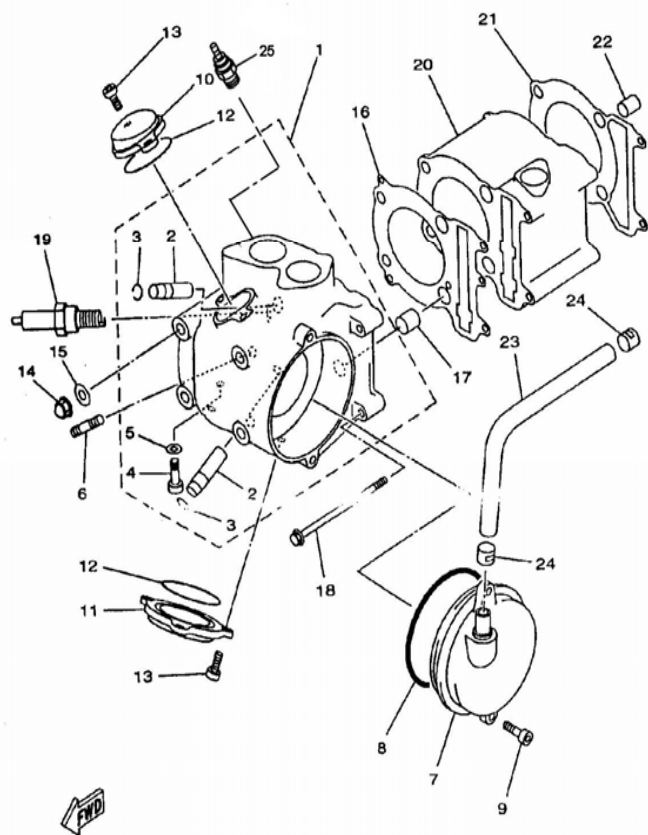


Ref#	Part#	Description	Qty	Linhai Code	Control Code
1	27337	CYLINDER HEAD ASSY	1	LH180MQ.1.1	1R001010000
2	27338	GUIDE INTAKE VALVE	2	LH180MQ.1.1-2	1R001010002
3	10112	CIRCLIP 12	2	170M.1.1-6	1L001010006
4	10086	BOLT M6X12	1	GB5783	B01010612
5	22810	GASKET 6	1	170M.1-9	1L001000009
6	10014	BOLT STUD M8X25	2	GB898	B01420825
7	22407A	BREATHER ASSY	1	170M-A.1.2.1	1L001020100
8	22408	O-RING 95X3.3	1	170M.1.2-5	1L001020005
9	10008	BOLT SOCKET HEAD M6X20	2	GB70	B02010620
10	22410	VALVE COVER INTAKE SIDE	1	170M.1-1	1L001000001
11	22411	VALVE COVER EXHAUST SIDE	1	170M.1-3	1L001000003
12	22412	O-RING 57.5X2.3	2	170M.1-2	1L001000002
13	10008	BOLT SOCKET HEAD M6X20	5	GB70	B02010620
14	22414	NUT CROWN M8	4	170M.4-1	1L004000001
15	22415	WASHER PLATE 8	4	170M.4-2	1L004000002
16	27221	GASKET CYLINDER HEAD1	1	LH180MQ.1.3	1R001030000
17	22417	PIN DOWEL 14X16	2	170M.1-6	1L001000006
18	27339	BOLT FLANGE M6X130	2	180MQ.4-4	1R004000004
19	22419	PLUG SPARK-NGK DR8EA	1	170M.1.5	1L001050000
20	27228	CYLINDER	1	LH180MQ.1-5	1R001000005
21	27226	GASKET CYLINDER	1	LH180MQ.1-4	1R001000004
22	22422	PIN DOWEL 10X14	2	1E52FM010011	1E001001100
23	22423	PIPE BREATHER1	1	170M.1.2-4	1L001020004
24	43514	CLIP 13MM	2	170M.20-4	1L020000004
25	22014	THERMO UNIT	1	170M.1.4	1L001040000


32. CRANKSHAFT COMP

This diagram illustrates the assembly of a crankshaft component. The main assembly, labeled 1, features a central shaft with a crank arm and a series of concentric rings. To the left, a large circular flange, labeled 5, is shown with a ring, labeled 6, attached to its side. Above the main assembly, a small pin, labeled 4, is positioned near a hole in the shaft. To the right of the main assembly, a small cylindrical pin, labeled 7, is shown. Below the pin 7, a small circular washer or spacer, labeled 8, is shown. Above the main assembly, a small circular washer or spacer, labeled 3, is shown. To the left of the washer 3, a small circular washer or spacer, labeled 2, is shown.

 [illegible]

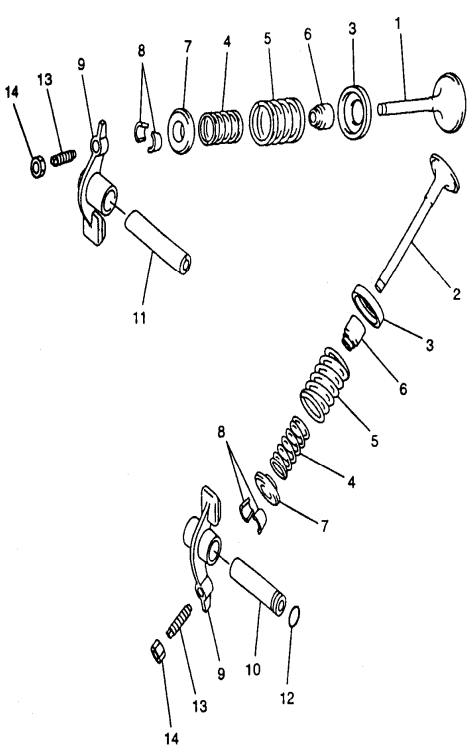
33. VALVE	Ref#	Part#	Description	Qty	Linhai Code	Control Code
	1	27222	INTAKE VALVE	1	LH180MQ.12-11	1R012000011
	2	27223	EXHAUST VALVE	1	LH180MQ.12-3	1R012000003
	3	22603	SEAT SPRING VALVE	2	170M.12-12	1L012000012
	4	22604	SPRING VALVE INNER	2	170M.12-10	1L012000010
	5	22605	SPRING VALVE OUTER	2	170M.12-9	1L012000009
	6	22606	SEAL VALVE STEM	2	170M.12.1	1L012010000
	7	22607	RETAINER SPRING VALVE	2	170M.12-5	1L012000005
	8	22608	COTTER VALVE	4	170M.12-4	1L012000004
	9	22609	ROCKER ARM VALVE	2	170M.12.2	1L012020000
	10	22610	EXHAUST ROCKER SHAFT	1	170M.12-6	1L012000006
	11	22611	INTAKE ROCKER SHAFT	1	170M.12-8	1L012000008
	12	22612	O-RING 9X2	1	170M.12-7	1L012000007
	13	22613	ADJUSTING SCREW VALVE	2	170M.12-2	1L012000002
	14	22614	NUT M6X0.75	2	170M.12-1	1L012000001

 34. CAMSHAFT CHAIN

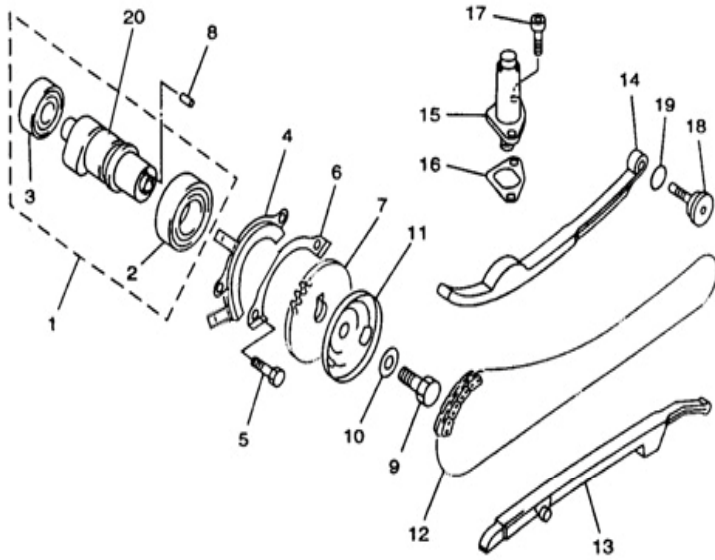

Ref#	Part#	Description	Qty	Linhai Code	Control Code
1	27234	CAMSHAFT ASSY1	1	LH180MQ.2	1R002000000
2	10012	BEARING	1	GB276	B1316105
3	10013	BEARING(B6202Z)	1	GB276	B13160202
4	27237	PLATE	1	LH180MQ.2-3	1R002000003
5	10086	BOLT M6X12	2	GB5783	B01010612
6	27236	LOCK WASHER	1	LH180MQ.2-2	1R002000002
7	22707	CAM CHAIN SPROCKET	1	170M.2-4	1L002000004
8	10024	DOWEL PIN B4X10	1	GB119	B03120410
9	10025	BOLT M10X1.25X25	1	GB5786	B01021025A
10	22710	WASHER PLATE 10	1	170M.2-6	1L002000006
11	22711	BREATHER PLATE2	1	170M.2-5	1L002000005
12	27201	CHAIN	1	180MQ.14.2	1R014020000
13	27203	GUIDE STOPPER1	1	180MQ.14.4	1R014040000
14	27202	GUIDE STOPPER2	1	180MQ.14.3	1R014030000
15	22715a	CAM CHAIN TENSIONER ASSY	1	170M.14.1a	1L01401a0000
16	22716	GASKET TENSIONER CASE	1	170M.14-1	1L014000001
17	10036	SOCKET HEAD BOLT M6X14	2	GB70	B02010614
18	22718	CHAIN TENSIONER PIVOT BOLT	1	170M.14-2	1L014000002
19	22719	O-RING 14.5X1.8	1	170M.14-3	1L014000003
20	27235	CAMSHAFT	1	LH180MQ.2-1	1R002000001

 35. WATER PUMP

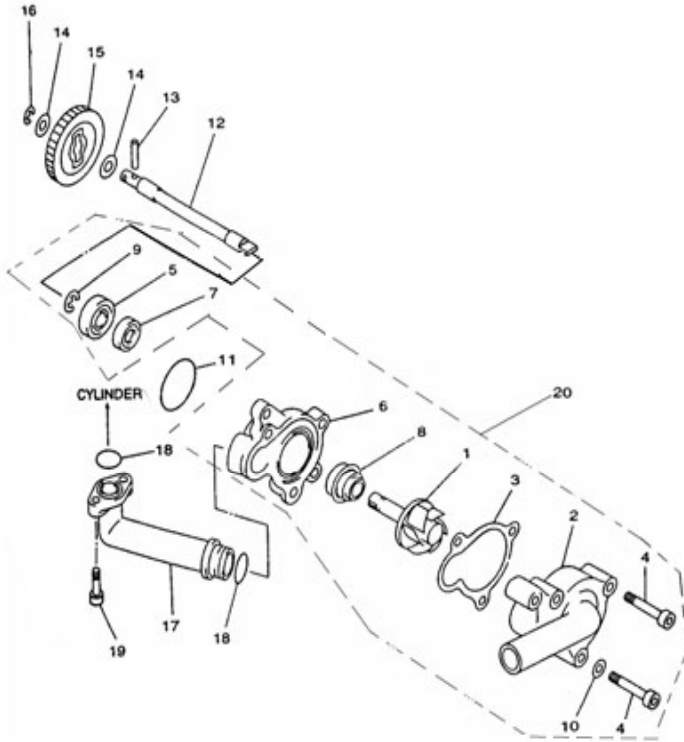

Ref#	Part#	Description	Qty	Linhai Code	Control Code
1	22801	IMPELLER SHAFT ASSY(NYLON)	1	170M.15.4	1L015040000
1	22801a	IMPELLER SHAFT ASSY (ADC12)	1	170M.15.4a	1L01504a0000
2	22802	HOUSING COVER	1	170M.15-2	1L015000002
3	22803	GASKET HOUSING COVER2	1	170M.15-5	1L015000005
4	10041	SOCKET HEAD BOLT M6X35	3	GB70-M6X35	B02010635
5	10043	BEARING	1	GB276	B131E110
6	22806	WATER PUMP HOUSING	1	170M.15-3	1L015000003
7	22807	OIL SEAL 10X21X5	1	170M.15.1	1L015010000
8	22808	MECHANICAL SEAL	1	170M.15.2	1L015020000
9	10044	CIRCLIP 9	1	170M.15-6	1L015000006
10	22810	GASKET 6	1	170M.1-9	1L001000009
11	10049	O-RING 33.5X2.65	1	GB3452.1	B121335265
12	27230	SHAFT	1	LH180MQ.15-1	1R015000001
13	10070	DOWEL PIN C3X22	1	GB119	B03123022
14	22814	WASHER PLATE 8	2	170M.8-6	1L008000006
15	22815	IMPELLER SHAFT GEAR	1	170M.15-4	1L015000004
16	10072	CIRCLIP 8	1	GB894.1-8	B036208
17	27229	JOINT (NYLON)	1	LH180MQ.15.3.1	1R015030100
17	27229a	JOINT (ADC12)	1	LH180MQ.15.3.1a	1R0150301a00
18	10082	O-RING 15.5X2.5	2	GB3452.1	B121155250
19	10083	SOCKET HEAD BOLT M6X15	2	GB70	B02010615
20	22820	WATER PUMP ASSY	1	170M.15	1L015000000

36. OIL PUMP

This diagram illustrates the assembly of an oil pump. The main components are shown in an exploded view relative to a larger engine block. The parts are numbered as follows:

 
- 1: Oil pump housing (main body)
- 2: Pin
- 3: Drive gear
- 4: Pin
- 5: Gear
- 6: Pin
- 7: Pin
- 8: Pin
- 9: Pin
- 10: Spring
- 11: Pin
- 12: Pin

[illegible]

37. CARBURETOR


[illegible]

38. CRANKCASE

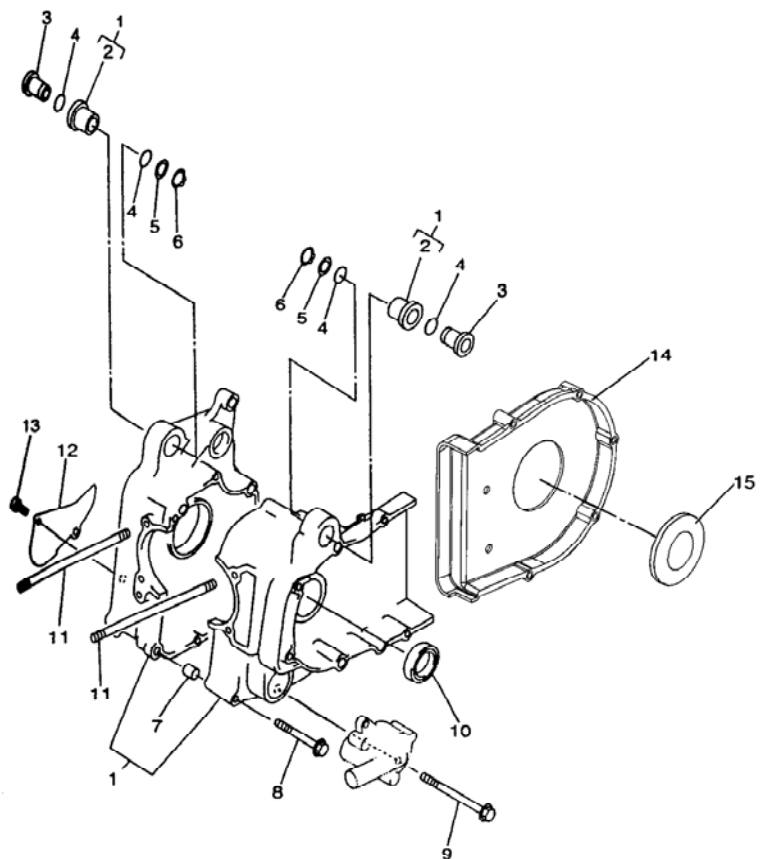


Ref#	Part#	Description	Qty	Linhai Code	Control Code
1	27204	CRANKCASE ASSY	1	180MQ.4	1R004000000
2	23502	HOLDER	2	170M.4.7	1L004070000
3	23503	COLLAR	2	170M.4-17	1L004000017
4	23504	O-RING16X2.5	4	170M.4-16	1L004000016
5	23505	WASHER PLATE 16	2	170M.4-18	1L004000018
6	10121	CIRCLIP 16	2	GB894.1-16	B036216
7	22422	DOWEL PIN 10X14	2	1E52FM010011	1E001001100
8	23508	FLANGE BOLT M6X70	4	170M.4-5	1L004000005
9	23509	FLANGE BOLT M6X100	5	153FM.16-9	1H016000009
10	23510	OIL SEAL 30X45X5	1	170M.4.3	1L004030000
11	27205	STUD BOLT M8X253.6	4	180MQ.4-3	1R004000003
12	23512	COVER CRANKCASE RIGHT	1	170M.4-12	1L004000012
13	10036	SOCKET HEAD BOLT M6X14	2	GB70	B02010614
14	27232	REAR INSIDE COVER	1	LH180MQ.18.2-1	1R018020001
15	23515	AIRPROOF COVER	1	LH260ATV.14.1-2	8E014010002

 39. LEFT & RIGHT COVER

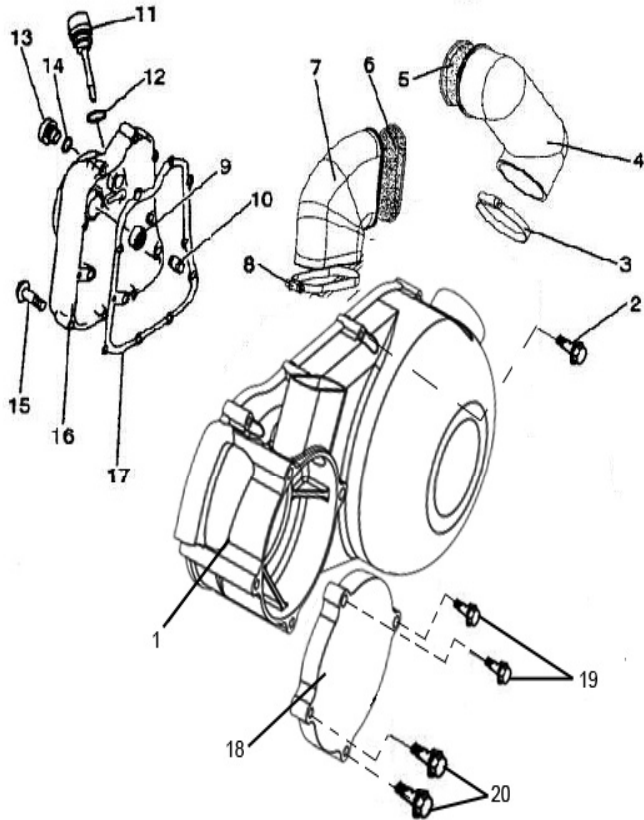


Ref#	Part#	Description	Qty	Linhai Code	Control Code
1	27231	COVER CRANKCASE LEFT	1	LH180MQ.18.1	1R018010000
2	10177	FLANGE BOLT M6X40	6	GB/T16674.1	B01040640
3	23603	HOSE CLAMP B	1	LH260ATV.14.2.4	8E014020400
4	23604	JOINT A	1	LH260ATV.14.2-3	8E014020003
5	23605	AIR STRAINER B	1	LH260ATV.14.2.3	8E014020300
6	23606	AIR STRAINER A	1	LH260ATV.14.2.2	8E014020200
7	23607	JOINT B	1	LH260ATV.14.2-1	8E014020001
8	23608	HOSE CLAMP A	1	LH260ATV.14.2.1	8E014020100
9	23609	OIL SEAL	1	170M.5.1	1L005010000
10	22422	DOWEL PIN 10X14	4	1E52FM010011	1E001001100
11	23611	OIL PLUG	1	170M.5-5	1L005000005
12	10122	O-RING 18X2.65	1	GB3452.1	B121180265
13	23613	OIL PLUG	1	170M.5-4	1L005000004
14	10123	O-RING 14X2.65	1	GB3452.1	B121140265
15	23615	FLANGE BOLT M6X40	15	170M.4-21	1L004000021
16	23616	CAP COVER	1	170M.5-1	1L005000001
17	23616A	CAP COVER (USE WITH HIGH-POWER GENERATOR)	1	170M.5-1a	1L005000001a
18	23617	CRANKCASE COVER GASKET RIGHT	1	170M.5-2	1L005000002
19	27233	FRONT COVER	1	LH180MQ.18-1	1R018000001
20	10110	BOLT M6X20	2	GB/T16674.1	B01040620
21	27208	BOLT M6X110	2	GB/T16674.1	B010406110

 40. STARTER

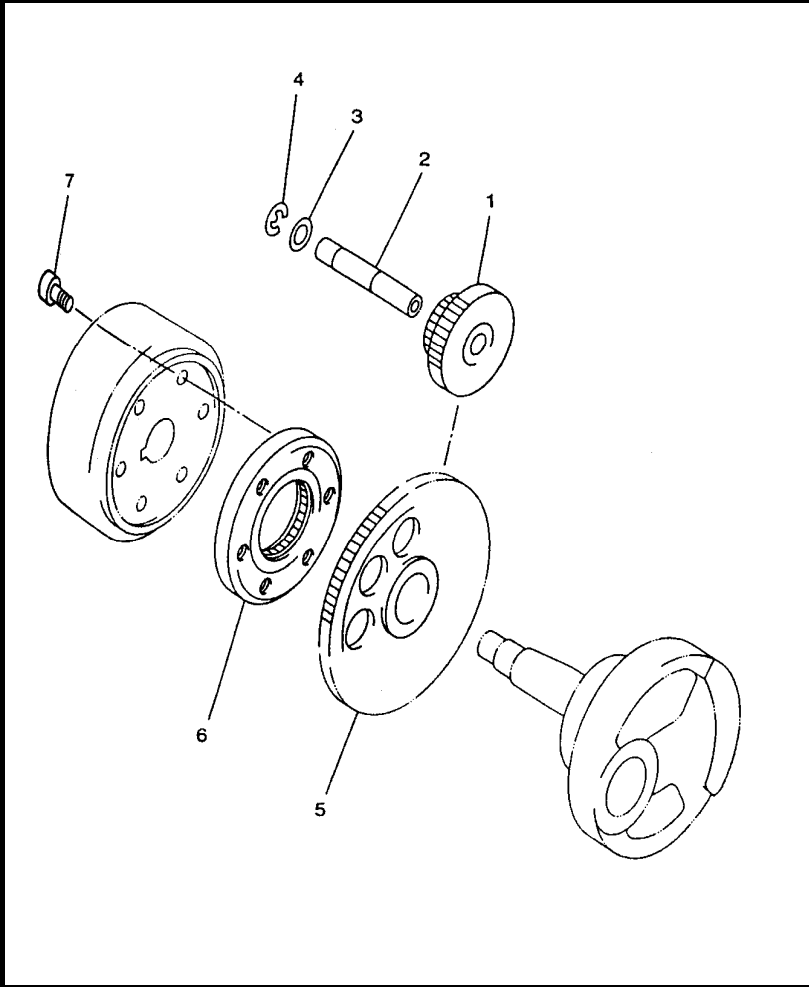[illegible]

 41. CLUTCH

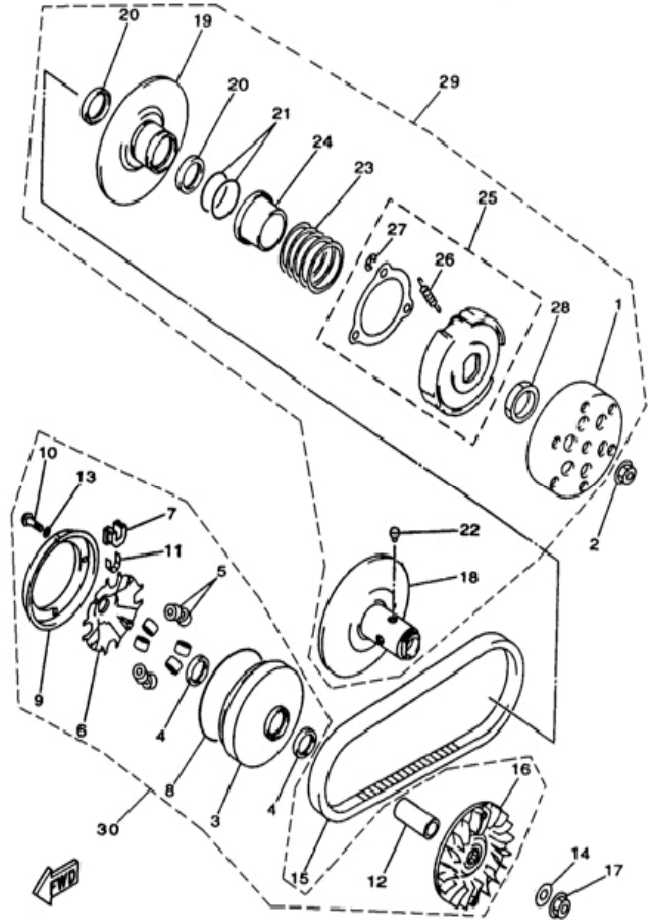

Ref#	Part#	Description	Qty	Linhai Code	Control Code
1	27251	CLUTCH HOUSING COMP.	1	LH180MQ.9.2.3	1R009020300
2	23802	NUT M14X1	1	170M.9-2	1L009000002
3	23803	PRIMARY SLIDING SHEAVE COMP	1	170M.9.1.1	1L009010100
4	23804	OIL SEAL	2	170M.9.1-5	1L009010005
5	23805	WEIGHT	8	170M.9.1.2	1L009010200
6	27246	CAM	1	LH180MQ.9.1-4	1R009010004
7	23807	SLIDER	4	170M.9.1-1	1L009010001
8	23808	O-RING 118X2.5	1	170M.9.1-6	1L009010006
9	23809	STOPPER	1	170M.9.1-2	1L009010002
10	10132	PAN HEAD SCREW M4X12	4	GB818	B02020412
11	23811	SPACER 1	4	170M.9.1-3	1L009010003
12	27252	COLLAR	1	LH180MQ.9-1	1R009000001
13	23813	WASHER PLATE 4	4	170M.9.1-8	1L009010008
14	23814	WASHER PLATE 14	1	170M.9-3	1L009000003
15	23815	V-BELT	1	170M.9-4	1L009000004
16	27247	SHEAVE PRIMARY FIXED	1	LH180MQ.9.1-7	1R009010007
17	23802	NUT M14X1	1	170M.9-2	1L009000002
18	23818	SECONDARY FIXED SHEAVE COMP.INCLUDE TWO BEARINGS ONE OIL SEAL AND ONE CIRCLIP	1	170M.9.2.1.1	1L00902010100
	25212			170M.9.2.1-5	1L009020105
	25213			170M.9.2.1-6	1L009020106
	25214			170M.9.2.1-7	1L009020107
	25215			170M.9.2.1-8	1L009020108


41. CLUTCH

This technical diagram illustrates the exploded view of a clutch assembly, showing the relationship between various components. The parts are numbered as follows:


- 1:** Clutch housing (upper part)
- 2:** Clutch housing (lower part)
- 3:** Clutch disc
- 4:** Clutch disc hub
- 5:** Clutch disc hub nut
- 6:** Clutch disc hub washer
- 7:** Clutch disc hub pin
- 8:** Clutch disc hub pin bush
- 9:** Clutch disc hub pin bush
- 10:** Clutch disc hub pin bush
- 11:** Clutch disc hub pin bush
- 12:** Clutch disc hub pin bush
- 13:** Clutch disc hub pin bush
- 14:** Clutch disc hub pin bush
- 15:** Clutch disc hub pin bush
- 16:** Clutch disc hub pin bush
- 17:** Clutch disc hub pin bush
- 18:** Clutch disc hub pin bush
- 19:** Clutch disc hub pin bush
- 20:** Clutch disc hub pin bush
- 21:** Clutch disc hub pin bush
- 22:** Clutch disc hub pin bush
- 23:** Clutch disc hub pin bush
- 24:** Clutch disc hub pin bush
- 25:** Clutch disc hub pin bush
- 26:** Clutch disc hub pin bush
- 27:** Clutch disc hub pin bush
- 28:** Clutch disc hub pin bush
- 29:** Clutch disc hub pin bush
- 30:** Clutch disc hub pin bush

The diagram shows the assembly sequence from the housing (1, 2) through the disc (3) and hub (4) to the various pins and bushings (5-30). A small arrow in the bottom left corner points towards the assembly direction.

 
[illegible]

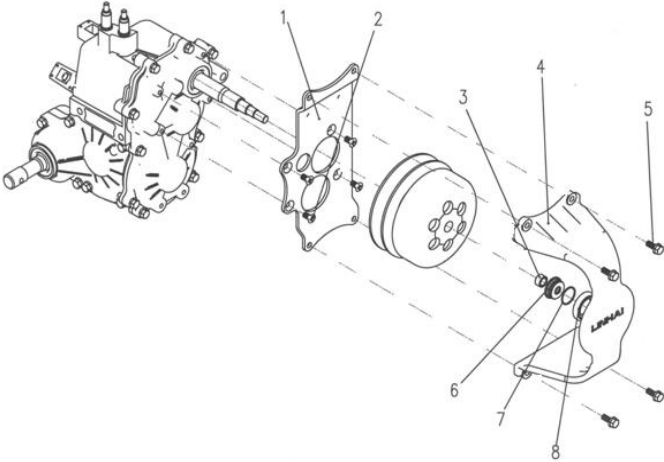42. HIGH-POWER CLUTCH STAND ASSY		Ref#	Part#	Description	Qty	Linhai Code	Control Code
		1	23941	BRACKET 1	1	LH260ATV.14.3.1	8E014030100
		2	10424	SWCREW M8X12	4	GB/T819	B02030812
		3	23942	SMALL SPACER	1	LH260ATV.14.3-2	8E014030002
		4	23943	BRACKET 2	1	LH260ATV.14.3-1	8E014030001
		5	10425	BOLT M8X22	4	GB/T16674.1	B01040822
		6	23944	SPACER	1	170M.18-6	1L018000006
		7	10321	O-RING 26.5X1.8	1	GB/T3452.1	B121265180
		8	43621	BEARING 6906Z	1	GB/T276	B1316906Z

43. GENERATOR

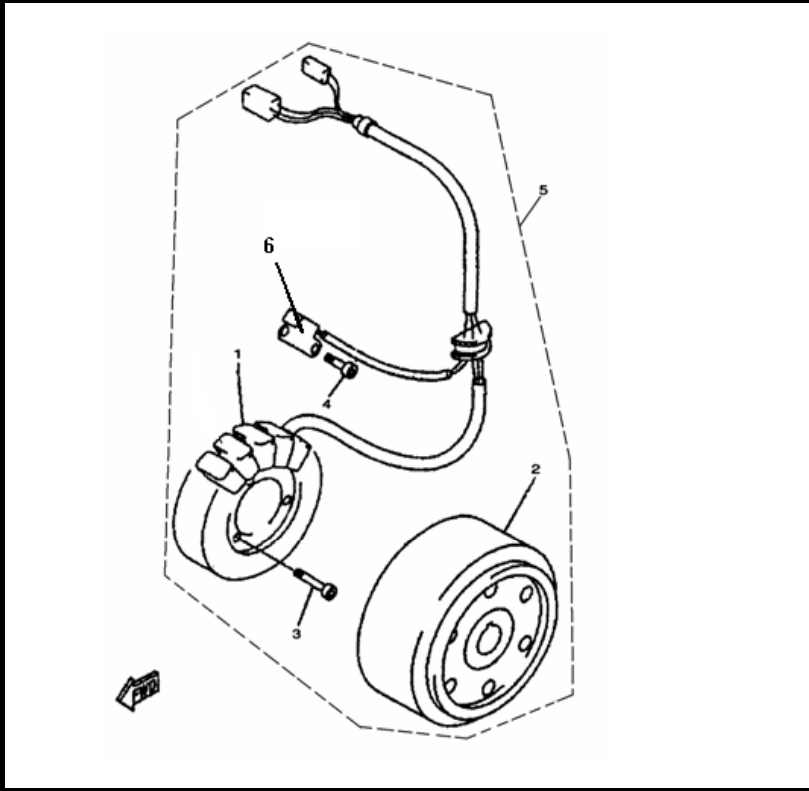[illegible]

 44. STARTING MOTOR

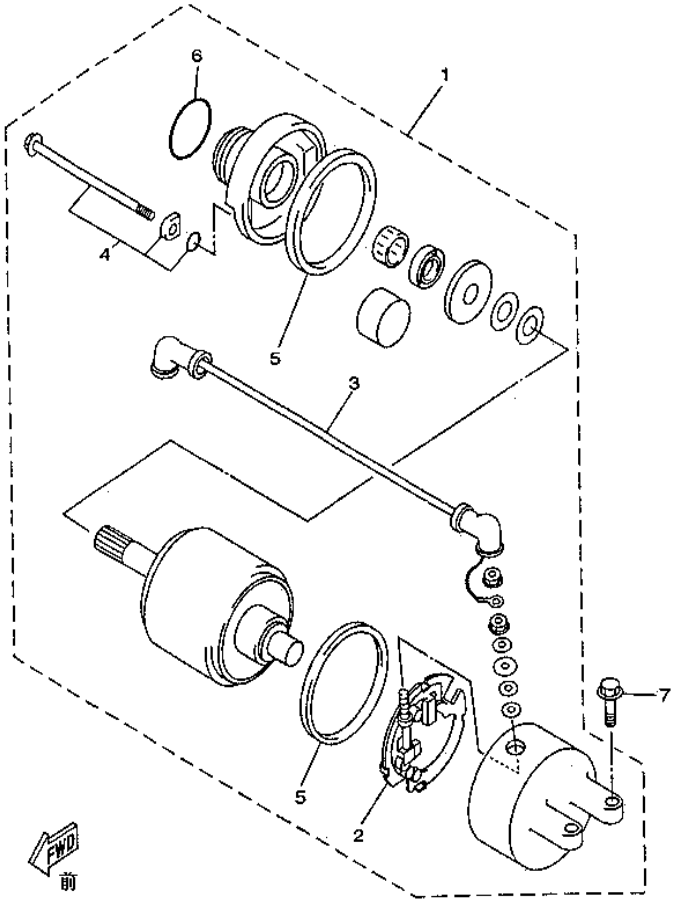[illegible]

[illegible]